



> SG BODY
REFLECTOR BASE
Safety Light Curtains



ORIGINAL INSTRUCTIONS (ref. 2006/42/EC)

This product is covered by one or more of the following patents.

Italian Patent IT 1,363,719

Additional patents pending

Datalogic S.r.l.
Via S. Vitalino 13
40012 Calderara di Reno
Italy

SG BODY REFLECTOR BASE Instruction Manual

Ed.: 10/2017 Rev. B

© 2012 – 2017 Datalogic S.p.A. and/or its affiliates ♦ ALL RIGHTS RESERVED. ♦ Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates.

Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U. All other trademarks and brands are property of their respective owners.

Datalogic shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from the use of this material.

26/10/2017



Product Service

CERTIFICATE

No. Z10 17 02 70800 046

Holder of Certificate: **Datalogic S.r.l.**
Via San Vitalino 13
40012 Lippo di Calderara di Reno
ITALY

Factory(ies): 70800, 96012

Certification Mark:



Product: **Electro-Sensitive Protective Equipment
Safety Light Curtain (Type 4)**

Model(s): **SG4-Series**
For nomenclature see attachment

Parameters:

Supply Voltage:	24 ±20% Vdc
Resolution:	14mm, 30mm or 2, 3, 4 beams
Protection class:	IP65

Tested according to:

- 2006/42/EC
- EN 61496-1:2013
- EN 61496-2:2013
- EN ISO 13849-1:2015 (Cat.4, PL e)
- EN 61508-1:2010 (SIL3)
- EN 61508-2:2010 (SIL3)
- EN 61508-3:2010 (SIL3)
- EN 61508-4:2010 (SIL3)
- EN 62061:2005/A2:2015 (SIL CL3)

The product was tested on a voluntary basis and complies with the essential requirements. The certification mark shown above can be affixed on the product. It is not permitted to alter the certification mark in any way. In addition the certification holder must not transfer the certificate to third parties. See also notes overleaf.

Test report no.: DM82444T

Valid until: 2021-07-04

Date, 2017-02-13

(Christian Dirmeier)

Page 1 of 4



CE COMPLIANCE

CE marking states the compliance of the product with essential requirements listed in the applicable European directive. Since the directives and applicable standards are subject to continuous updates, and since Datalogic promptly adopts these updates, therefore the EU declaration of conformity is a living document. The EU declaration of conformity is available for competent authorities and customers through Datalogic commercial reference contacts. Since April 20th, 2016 the main European directives applicable to Datalogic products require inclusion of an adequate analysis and assessment of the risk(s). This evaluation was carried out in relation to the applicable points of the standards listed in the Declaration of Conformity. Datalogic products are mainly designed for integration purposes into more complex systems. For this reason it is under the responsibility of the system integrator to do a new risk assessment regarding the final installation.

Warning

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

INDEX

1	GENERAL INFORMATIONS ABOUT THIS DOCUMENT	1
1.1	Purpose of this document	1
1.2	Intended readers	1
1.3	Informations for the use	1
2	GENERAL INFORMATIONS ABOUT THE PRODUCT	2
2.1	General description of the safety light curtains	2
2.2	Appearance and interface	4
2.2.1	Package contents	4
2.3	Main functions and new features	4
2.4	How to choose the device	4
2.4.1	Resolution	4
2.4.2	Controlled height	6
2.4.3	Minimum installation distance	8
2.5	Typical applications	10
2.6	Safety information	11
3	INSTALLATION MODE	12
3.1	Precautions to be observed for the choice and installation of the device	12
3.2	General information on device positioning	13
3.2.1	Minimum installation distance	14
3.2.2	Minimum distance from reflecting surfaces	14
3.2.3	Distance between homologous devices	16
3.2.4	Active and passive orientation	18
3.2.5	Precautions to respect during the use of deviating mirrors	18
3.2.6	Controls after first installation	18
4	MECHANICAL MOUNTING	20
4.1	Side fixing brackets	20
4.2	Rotating brackets	20
4.3	Bottom fixing brackets	21
4.4	Vibration dampers	21
5	ELECTRICAL CONNECTIONS AND CONFIGURATION – STOP	22
5.1	Important notes for installation	22
5.2	Minimal connection	23
5.3	Complete connection list	23
5.4	Restart mode and Reset/Restart button connection	23
5.5	External relays connection	24
5.6	EDM ENABLE input connection	26
5.7	EDM control connection	26
5.8	Earth connection	26
6	FUNCTIONING MODE	27
6.1	Standard configuration	27
6.2	Reset function	28
6.3	Restart mode selection function	29
6.4	EDM function	30
6.5	Alignment function	31
7	ALIGNMENT PROCEDURE	32
7.1	Light curtain alignment procedure	33
8	DIAGNOSTICS	35
8.1	User interface	35
8.2	Diagnostic messages	35
8.2.1	Active unit side	35
9	PERIODICAL MAINTENANCE AND WARRANTY	37
9.1	General information and useful data	38
9.2	Warranty	38

10	DEVICE MAINTENANCE	39
10.1	Product disposal	39
11	TECHNICAL DATA	40
12	OVERALL DIMENSIONS	41
13	LIST OF AVAILABLE MODELS	42
14	ACCESSORIES	43
14.1	Metal angled fixing bracket (ST-K4STD-SG BODY BIG)	43
14.2	Rotative fixing bracket (ST-K4ROT-SG BODY BIG)	45
14.3	Rear fixing bracket (ST-K4REAR-SG BODY BIG)	46
14.4	Protective stands (SG-PSM).....	47
14.5	Protective stands (SG-PSB)	48
14.6	Plate kit for protective stands (SG-P)	49
14.7	Columns and floor stands (SE-S)	50
14.8	Laser pointer (SG-LP).....	51
14.9	Test piece (TP)	51
14.10	Connection cables	52
14.11	Safety relay	53
15	GLOSSARY	54

1 GENERAL INFORMATIONS ABOUT THIS DOCUMENT

Read this section carefully before implementing the instructions given in this manual and starting up the SG BODY safety system.

1.1 PURPOSE OF THIS DOCUMENT

These instructions for use are addressed to the manufacturer technicians or staff operating the machine and give all necessary instructions for correct and safe assembly, setup, electric connection and commissioning of the SG BODY series light curtains.

Scope of this document excludes information about use of the machine the safety system is installed to.

1.2 INTENDED READERS

The instructions for use given herein are addressed to designers, manufacturers and persons in charge of the safety of systems to be equipped with the SG BODY series light curtains. They are also addressed to the staff in charge of installing the SG BODY light curtain to a machine, commissioning it or servicing it.

1.3 INFORMATIONS FOR THE USE

These instructions for use contain the following details about the SG BODY series light curtains:

- installation	- diagnostics and troubleshooting
- electrical connection	- user interface warnings
- commissioning and setup	- conformity and type approval
- application	- care and maintenance

Designing and using safety devices to integrate to the SG BODY safety system requires specific know-how which is not included in this document. In particular, the applicable industry standards shall be met.

For all the acronyms used in this document please refer to section 14.

2 GENERAL INFORMATIONS ABOUT THE PRODUCT

2.1 GENERAL DESCRIPTION OF THE SAFETY LIGHT CURTAINS

The safety light curtains of the SG Body series are optoelectronic multibeam devices that are used to protect working areas that, in presence of machines, robots, and automatic systems in general, can become dangerous for operators that can get in touch, even accidentally, with moving parts.

The light curtains of the SG Body series are safety systems used as accident-prevention protection devices and are manufactured in accordance with the international Standards in force for safety, in particular:

EN 61496-1:2013	Safety of machinery: electrosensitive protective equipment. Part 1: General prescriptions and tests.
EN 61496-2:2013	Safety of machinery: electrosensitive protective equipment - Particular requirements for equipment using active optoelectronic protective devices.
EN ISO 13849-1:2008	Safety of machinery. Safety-related parts of control systems. Part 1: General principles for design
EN 61508-1:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems. Part 1: General requirements
EN 61508-2:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems. Part 2: Requirements for electrical/electronic/programmable electronic safety-related systems
EN 61508-3:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems. Part 3: Software requirements
EN 61508-4:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems. Part 4: Definitions and abbreviations
EN 62061:2005/A1:2013	Safety of machinery. Functional safety of electrical/ electronic/programmable electronic safety-related control systems.

The device, consisting in one active unit inside a sturdy aluminium profile and a passive unit composed of two or more deviating mirrors, generates couples of infrared beams able to detect an opaque object positioned within the light curtain detection field.

The active unit is composed of two types of optic groups: emitting and receiving units.

The infrared beam, generated by an emitting optic group, is reflected by the deviating mirrors and thus re-guided towards the corresponding receiving optic group of the active unit.

The passive unit is composed of a sturdy aluminium profile containing pre-assembled and pre-aligned mirrors.

The active unit is equipped with the command and control functions. The connections are made through a M12 connector located in the lower side of the profile of the active unit.

The microprocessor guarantees the check and the management of the beams that are sent and received through the units: The microprocessor LEDs and display inform the operator about the general conditions of the safety light curtain (see section 8 - "DIAGNOSTICS").

The device consists in 2 units: the active unit and the passive unit. The active unit, according to the model, is composed by one or several emitting and receiving modules and checks the control operations and safety actions.

During installation, a user interface facilitates the alignment of both units (see section 7 – "ALIGNMENT PROCEDURE")

As soon as an object or the operator's body accidentally interrupts one or some of the infrared beams sent by the emitter, the receiver immediately opens the OSSD outputs and blocks the MPCE machine (if correctly connected to the OSSD).

Some parts or sections of this manual containing important information for the user or installing operator are preceded by a note:



Notes and detailed descriptions about particular characteristics of the safety devices in order to better explain their functioning. Special instructions regarding the installation process.



The information provided in the paragraphs following this symbol is very important for safety and may prevent accidents.

Always read this information accurately and carefully follow the advice to the letter.

This manual contains all the information necessary for the selection and operation of the safety devices.

However, specialised knowledge not included in this technical description is required for the planning and implementation of a safety light curtain on a power-driven machine. As the required knowledge may not be completely included in this manual, we suggest the customer to contact DATALOGIC Technical Service for any necessary information relative to the functioning of the SG BODY light curtains and the safety rules that regulate the correct installation (see section 9)

2.2 APPEARANCE AND INTERFACE

2.2.1 Package contents

Package contains the following objects:

- Active unit
- SG BODY quick installation guide
- Checklist and periodical maintenance schedule

2.3 MAIN FUNCTIONS AND NEW FEATURES

With respect to SE4-R series, the SG BODY safety light curtain series present new important features:

- No dead zone
- New engineering of passive unit
- Shorter response time (see section 11 – “TECHNICAL DATA”)
- Muting function customization
- Override function customization

2.4 HOW TO CHOOSE THE DEVICE





There are at least three different main characteristics that should be considered when choosing a safety light curtain, after having evaluated the risk assessment:

2.4.1 Resolution

The resolution of the device is the minimum dimension that an opaque object must have in order to obscure at least one of the beams that constitute the sensitive area.

The resolution strictly depends on the part of the body to be protected.

The following table shows the values of the optic interaxis (**I**), the resolution (**R**) and the optic diameter (**d**), of the safety light curtains.

Model	Optic interaxis (I) [mm]	N. optics	Resolution (R) [mm]	Lens diameter (d) [mm]	ESPE Type
SG4-RB2-050-OO-E	500	2	519,75	19,75	Body protection  Type 4
SG4-RB3-080-OO-E	380	3	399,75	19,75	Body protection  Type 4
SG4-RB4-090-OO-E	300	4	319,75	19,75	Body protection  Type 4
SG4-RB4-120-OO-E	400	4	419,75	19,75	Body protection  Type 4

As shown in Figure 1, the resolution depends only on the geometrical characteristics of the lenses, diameter and distance between centres, and is independent from any environmental and operating conditions of the safety light curtain.

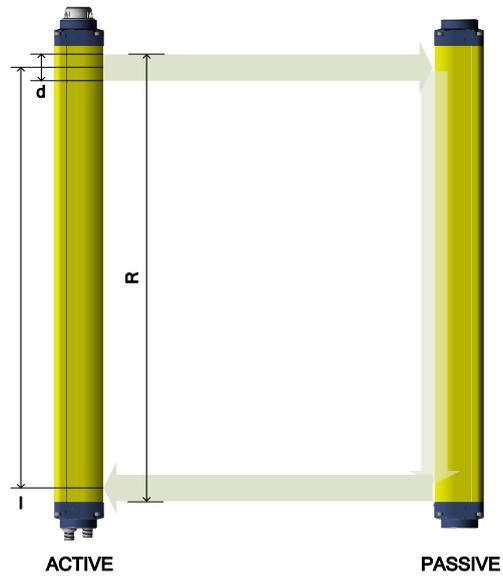


Figure 1

The resolution value is obtained applying the following formula: $R = l + d$

where:

$l =$ Distance between two adjacent optics

$d =$ Lens diameter

Note: Safety light curtains for body protection with sensitive area heights and optic interaxis different from the standard versions can be manufactured upon specific request.

2.4.2 Controlled height

The controlled height is the height protected by the safety light curtain (Hp). SG BODY models have no dead zone inside the protected area.

In

Figure 2, Figure 3 and Figure 4 SG BODY Reflector schemes respectively for 2 beams, 3 beams and 4 beams models are shown.

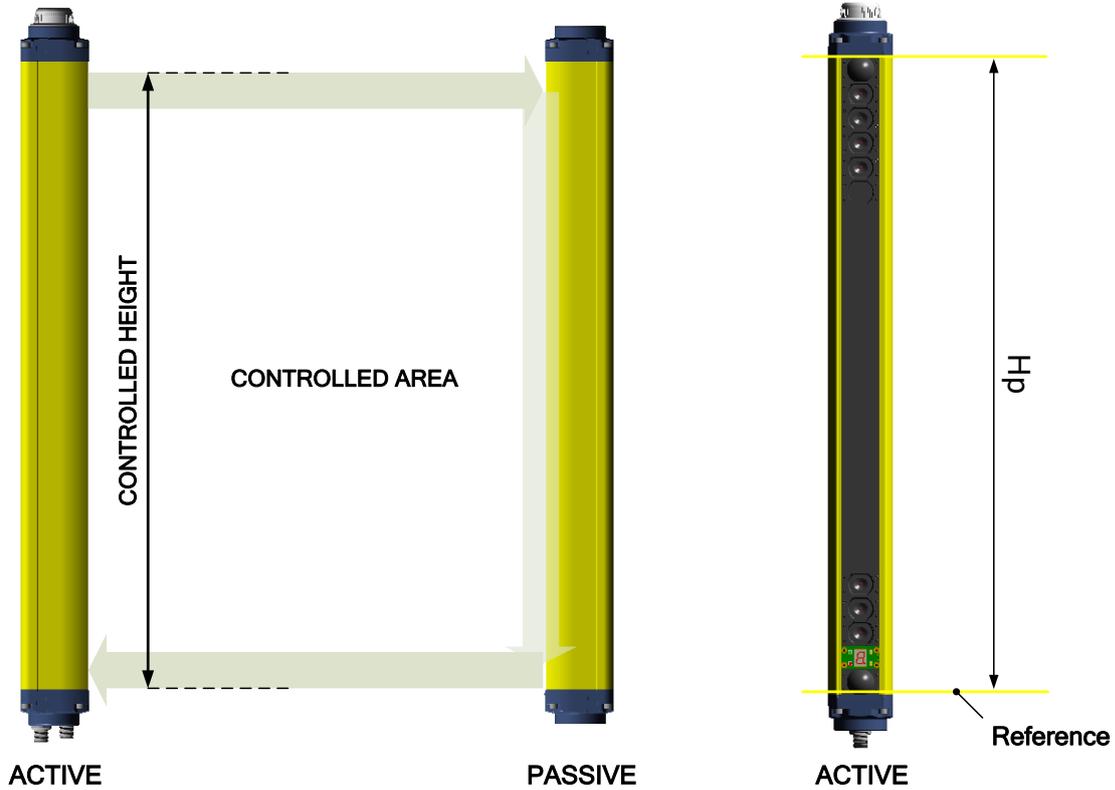


Figure 2

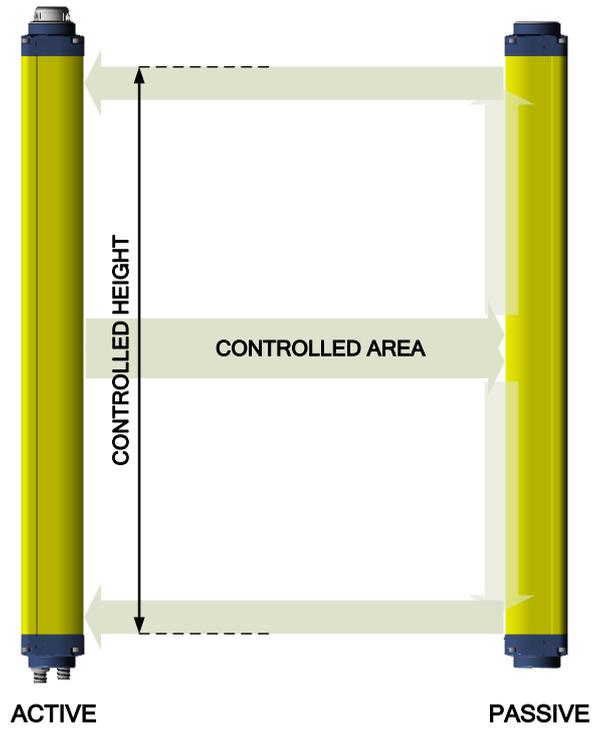


Figure 3

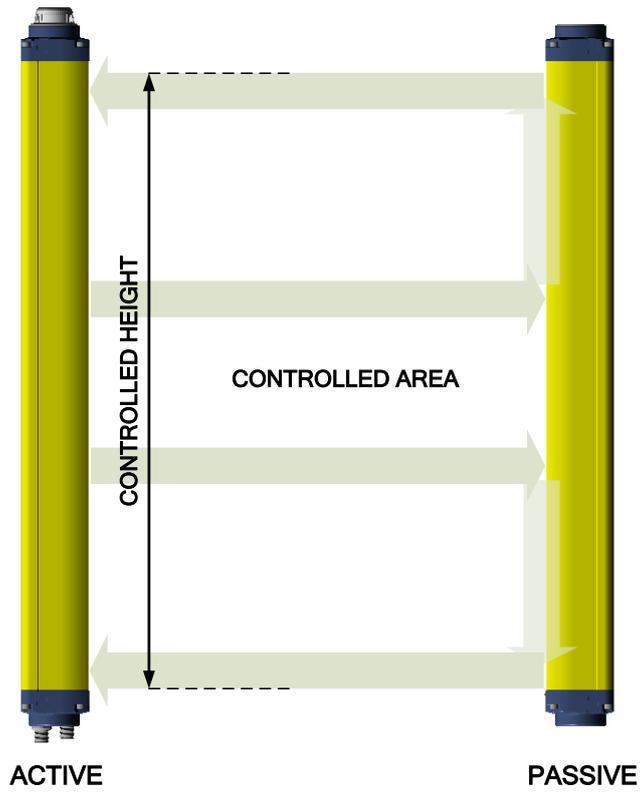






Figure 4

Model	H _p [mm]	ESPE Type
SG4-RB2-050-OO-E	500	Body protection 
SG4-RB3-080-OO-E	800	Body protection 
SG4-RB4-090-OO-E	900	Body protection 
SG4-RB4-120-OO-E	1200	Body protection 

2.4.3 Minimum installation distance

As shown in Figure 5, the safety device must be positioned at a specific safety distance. This distance must ensure that the dangerous area cannot be reached before the dangerous motion of the machine has been stopped by the ESPE.

The safety distance depends on 4 factors, according to the **EN ISO 13855 “Safety of machinery - The positioning of protective equipment in respect of approach speeds of parts of the human body”** Standard:

- Response time of the ESPE (the time between the effective beam interruption and the opening of the OSSD contacts).
- Machine stopping time (the time between the effective opening of the contacts of the ESPE and the real stop of the dangerous motion of the machine).
- ESPE resolution.
- Approaching speed of the object to be detected.

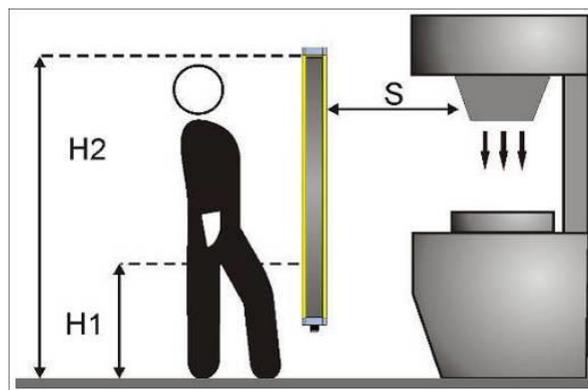


Figure 5

The following formula is used for the calculation of the safety distance:

$$S = K (t_1 + t_2) + C$$

where:

S = Minimum safety distance in mm.

K = Speed of the object, limb or body approaching the dangerous area in mm/sec.

t₁ = Response time of the ESPE in seconds (see section 11 – “TECHNICAL DATA”)

t₂ = Machine stopping time in seconds.

d = Resolution of the system.

C = Additional distance based on the possibility to insert the body or one of body parts inside the dangerous area before the protective device trips.

C = 8 (d -14) for devices with resolution ≤ 40mm

C = 850 mm for devices with resolution > 40mm



NOTE: K value is:
 2000 mm/s if the calculated value of S is ≤ 500 mm
 1600 mm/s if the calculated value of S is > 500 mm

When devices with > 40 mm resolution are used, the height of the top beam has to be ≥ 900 mm (H2) from machine supporting base while the height of the bottom beam has to be ≤ 300 mm (H1).
 If the safety light curtain must be mounted in a horizontal position (Figure 6), the distance between the dangerous area and the most distant optical beam must be equal to the value calculated using the following formula:

$$S = 1600 \text{ mm/s } (t_1 + t_2) + 1200 - 0.4 H$$

where:

- S = Minimum safety distance in mm.
- t₁ = Response time of the ESPE in seconds (see section 11 – “TECHNICAL DATA”)
- t₂ = Machine stopping time in seconds.
- H = Beam height from ground. This height must always be less than 1000 mm.

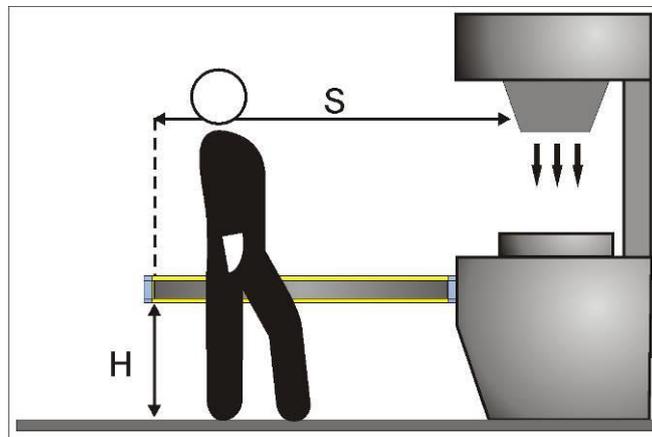


Figure 6

Practical examples

Let's suppose to have a light curtain with height = 500 mm
 To calculate the distance of the device from the ESPE, in a vertical position, the following formula is used:

$$S = K * T + C$$

where:

- T = t₁ + t₂
- t₁ = ESPE response time + SE-SR2 relay release time (max 80 ms)
- t₂ = Machine total stopping time (e.g. 300 ms).
- C = 8 (d -14) for devices with resolution ≤ 40mm
- C = 850 mm for devices with resolution > 40mm
- d = resolution

In all cases, if K = 2000mm/sec then S > 500 mm. Distance will have then to be recalculated using K = 1600 mm/sec.

	SGx-RB2	SGx-RB4
T [sec]	0.391	0.392
C [mm]	850	850
S [mm]	1475.6	1477.2

x = ESPE Type: 2,4



WARNING: The reference standard is *EN ISO 13855 “Machine safety - the positioning of the protective device based on the approaching speed of the human body”*. The following information is to be considered as indicative and concise. For correct safety distance please refer to complete standard EN ISO 13855.

2.5 TYPICAL APPLICATIONS

The safety light curtains of the SG BODY Series are used in all fields where control and protection of the access to dangerous zones is necessary, as well as allowing, by means of the Muting function, material passage inside a dangerous zone during working.

In particular they are used to stop the moving mechanical parts in:

- Access control
- Working areas
- Packaging machines, handling machines, storing machines;
- Automatic and semi-automatic assembly lines;
- Automatic warehouses;
- Robotics.

In food industry applications, Datalogic Technical Service has to verify the compatibility of the material of the safety light curtain housing with any chemical agents used in the production process.

The following pictures show some main applications.

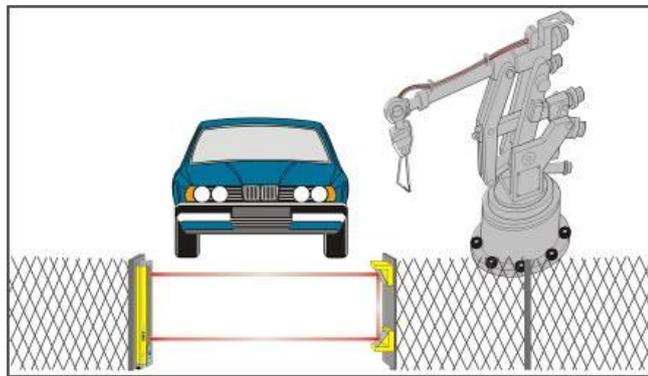


Figure 7 - Robotised assembly lines

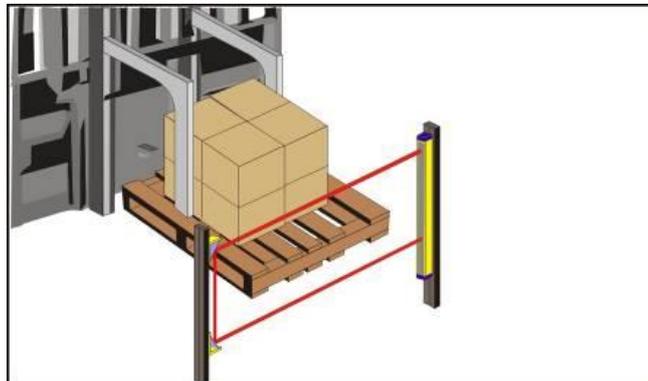


Figure 8 - Transfer areas

2.6 SAFETY INFORMATION



For a correct and safe use of the safety light curtains of the SG BODY series, the following points must be observed:

- The stopping system of the machine must be electrically controlled.
- This control system must be able to stop the dangerous movement of the machine within the total machine stopping time T as per paragraph 2.4.3, and during all working cycle phases.
- Mounting and connection of the safety light curtain must be carried out by qualified personnel only, according to the indications included in the special sections (refer to sections 3, 4, 0, 7) and to the applicable standards.
- The safety light curtain must be securely placed in a particular position so that access to the dangerous zone is not possible without the interruption of the beams (refer section 3 – “INSTALLATION MODE”).
- The personnel operating in the dangerous area must be well trained and must have adequate knowledge of all the operating procedures of the safety light curtain.
- The TEST button must be located outside the protected area because the operator must check the protected area during all the Test operation.
- The RESET/RESTART button must be located outside the protected area because the operator must check the protected area during all the Reset/Restart operations.
- The function of the external device monitoring (EDM) is active only if the specific wire is correctly connected to the device. Please carefully read the instructions for the correct functioning before powering the light curtain.
- Please carefully read the instructions for the correct functioning before powering the light curtain.

3 INSTALLATION MODE

3.1 PRECAUTIONS TO BE OBSERVED FOR THE CHOICE AND INSTALLATION OF THE DEVICE



Make sure that the protection level assured by the SG BODY series device (Type 2 or Type 4 respectively) is compatible with the real danger level of the machine to be controlled, according to EN 954-1 and EN13849-1.

- The outputs (OSSD) of the ESPE must be used as machine stopping devices and not as command devices (the machine must have its own START command).
- The dimension of the smallest object to be detected must be larger than the resolution level of the device.
- The ESPE must be installed in a room complying with the technical characteristics indicated in section 11 - TECHNICAL DATA. Datalogic does not recommend the use of the product in ambient where direct or indirect exposure to solar light is present.
- Do not install device near strong and/or flashing light sources or close to similar devices.
- Strong electromagnetic disturbance might negatively affect device operation. Should this be the case contact DATALOGIC Technical Service.
- The operating distance of the device can be reduced in presence of smog, fog or airborne dust.
- A sudden change in environment temperature, with very low minimum peaks, can generate a small condensation layer on the lenses and so jeopardise functioning.

3.2 GENERAL INFORMATION ON DEVICE POSITIONING

Pay special care when positioning the safety light curtain so to offer effective protection. The device should be installed in such a way that the dangerous area can only be entered after detecting the sensitive area.



Figure 9 shows some examples of possible access to the machine from the top and the bottom sides. These situations may be very dangerous and so the installation of the safety light curtain at sufficient height in order to completely cover the access to the dangerous area becomes necessary (see Figure 10).

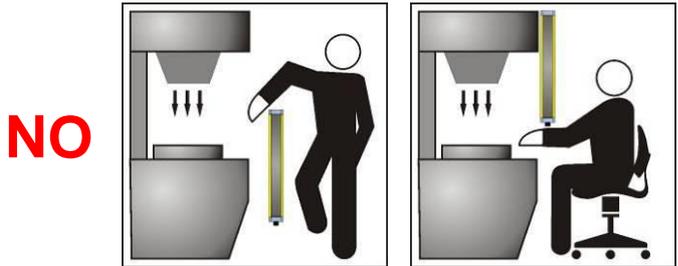


Figure 9

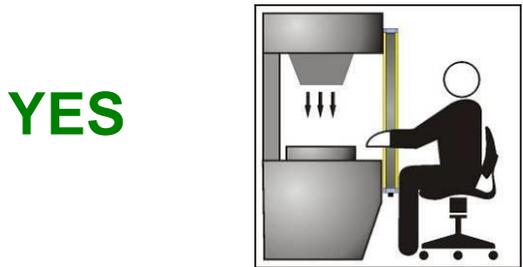


Figure 10

Under standard operating conditions, machine starting must not be possible while operators are inside the dangerous area.

When the installation of the safety light curtain very near to the dangerous area is not possible, a second light curtain must be mounted in a horizontal position in order to prevent any lateral access, as shown in Figure 12.



If the operator is able to enter the dangerous area, an additional mechanical protection must be mounted to prevent the access.

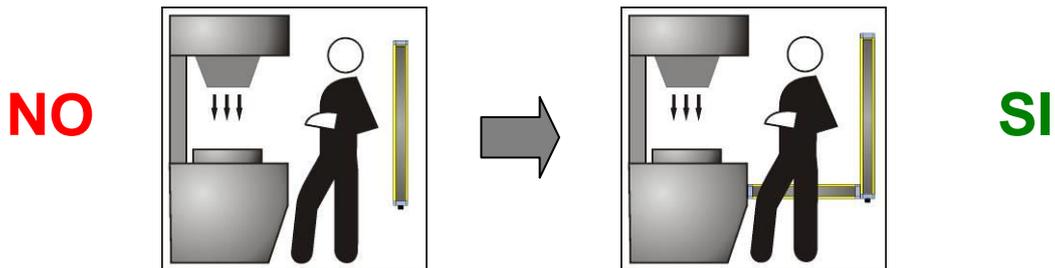


Figure 11

Figure 12

3.2.1 Minimum installation distance

Refer to paragraph 2.4.3 - Minimum installation distance.

3.2.2 Minimum distance from reflecting surfaces

Reflecting surfaces placed near the light beams of the safety device (over, under or laterally) can cause passive reflections. These reflections can affect the recognition of an object inside the controlled area.

However, if the RX receiver detects a secondary beam (reflected by the side-reflecting surface) the object might not be detected, even if the object interrupts the main beam.

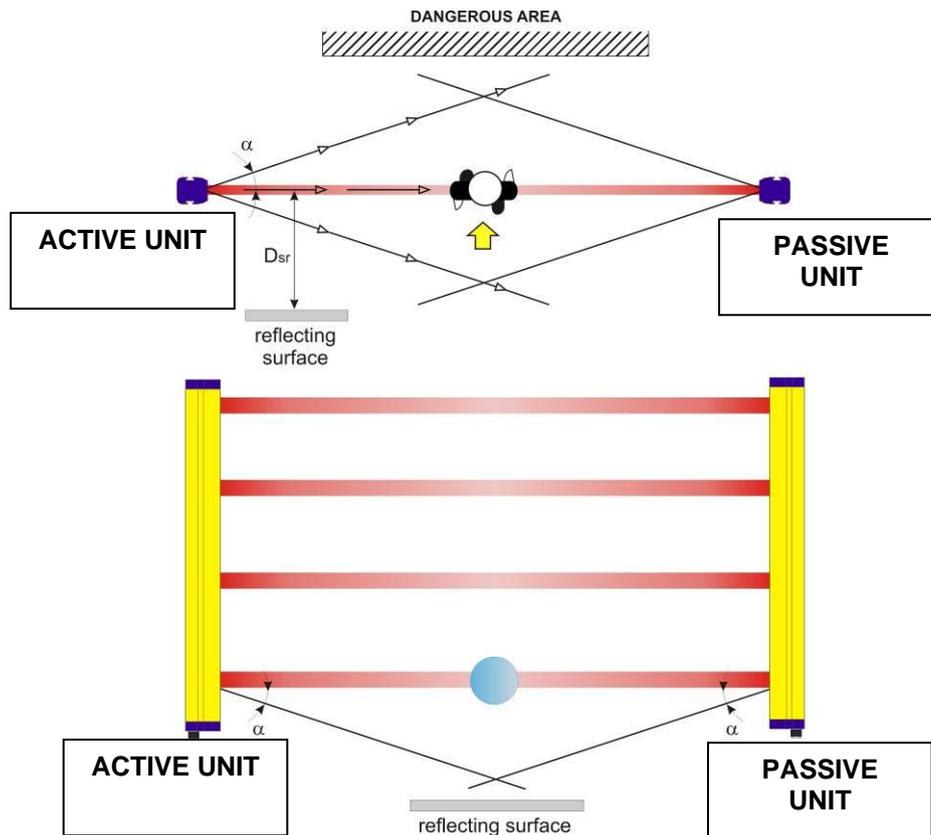


Figure 13

It is thus important to position the safety light curtain according to the minimum distance from reflecting surfaces.

The minimum distance depends on:

- operating distance between active and passive units.
- real aperture angle of ESPE (EAA); especially:

for ESPE type 4 $EAA_{MAX} = 5^\circ$ ($\alpha = \pm 2.5^\circ$)

Diagram of Figure 14 shows the minimum distance from the reflecting surface (D_{sr}), based on the operating distance for a Type 4 ESPE:

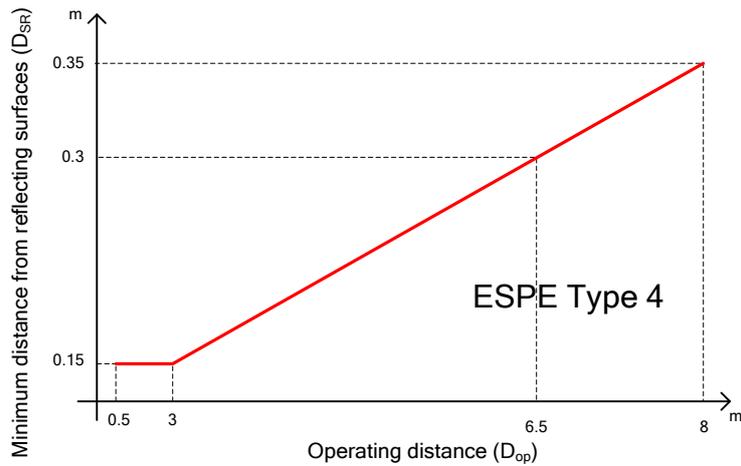


Figure 14

The formula to get D_{sr} for a Type 4 ESPE is the following:

$$D_{sr} (m) = 0.15 \quad \text{for operating distance} < 3 \text{ m}$$

$$D_{sr} (m) = 0.5 \times \text{operating distance (m)} \times \text{tg } 2\alpha \quad \text{for operating distance} \geq 3 \text{ m}$$

Even in presence of beam interruption due to reflecting objects, the correct device functioning is guaranteed and certified up to a maximum operating distance of 6.5m for SG4-RB4-090 model, or 8 m for SG4-RB2-050, SG4-RB3-080, SG4-RB4-120 models. The use of the device at higher distances, when possible, is however not recommended. If used, the user must check the correct functioning verifying that no dangerous reflections towards the receiving optics are generated by shiny objects (Figure 15).

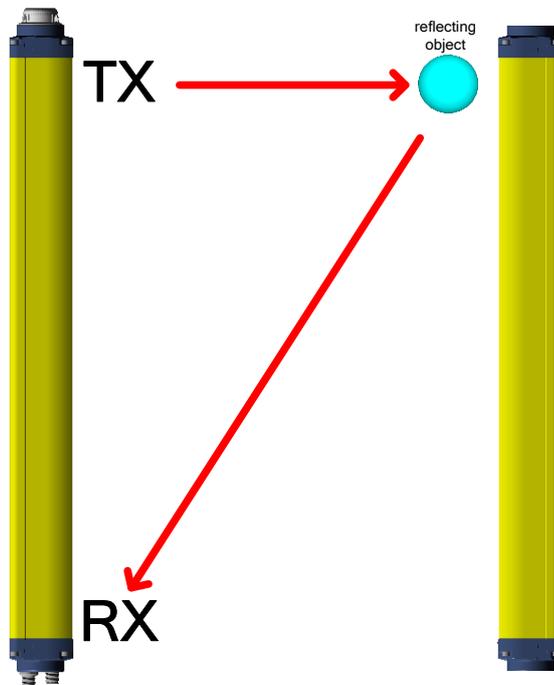


Figure 15

3.2.3 Distance between homologous devices

If different safety devices have to be installed in adjacent areas, the emitter of one device must not interfere dangerously with the receiver of the other device.

Passive B interfering device must be positioned outside a minimum D_{do} distance from the active – passive axis of the device A.

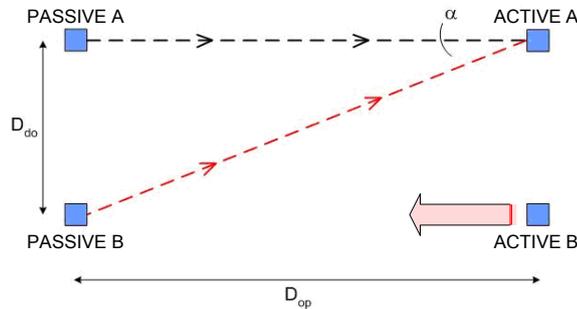


Figure 16

This minimum D_{do} distance depends on:

- the operating distance between Passive A and Active A;
- the effective aperture angle of the ESPE (EAA); especially:

for ESPE type 4 $EAA_{MAX} = 5^\circ$ ($\alpha = \pm 2.5^\circ$)

WARNING: the interfering device Passive B must be positioned at the same D_{do} distance, calculated as shown above, even if closer to Passive A respect to Active A.

The following graphic shows the distance from the interfering devices (D_{do}) according to the operating distance (D_{op}) of the couple Passive A – Active A for a Type 4 ESPE.

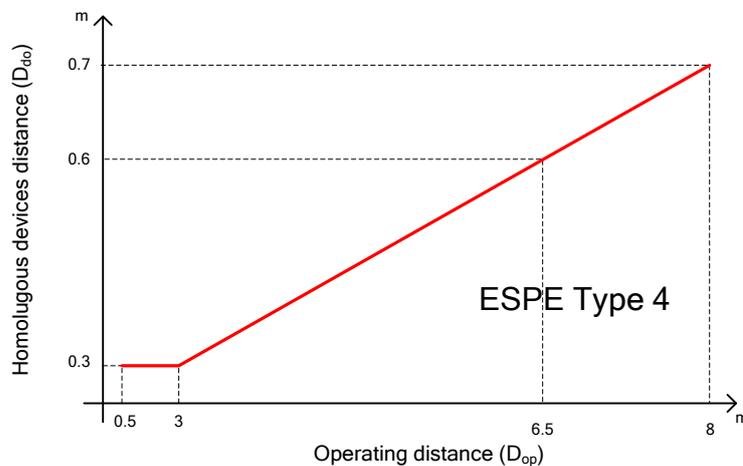


Figure 17

The formula to get D_{op} for a Type 4 ESPE is the following:

$$D_{op} (m) = 0.3 \quad \text{for operating distance} < 3 \text{ m}$$

$$D_{op} (m) = \text{operating distance (m)} \times \text{tg } 2\alpha \quad \text{for operating distance} \geq 3 \text{ m}$$

Installation precautions have to be taken to avoid interference between homologous devices. A typical situation is represented by the installation areas of several adjacent safety devices aligned one next to the other, for example in plants with different machines.

Figure 18 provides some examples for a 4 beam device; obviously a contemporary activation of more emitters is not possible and the emitter/receiver couples are activated sequentially.

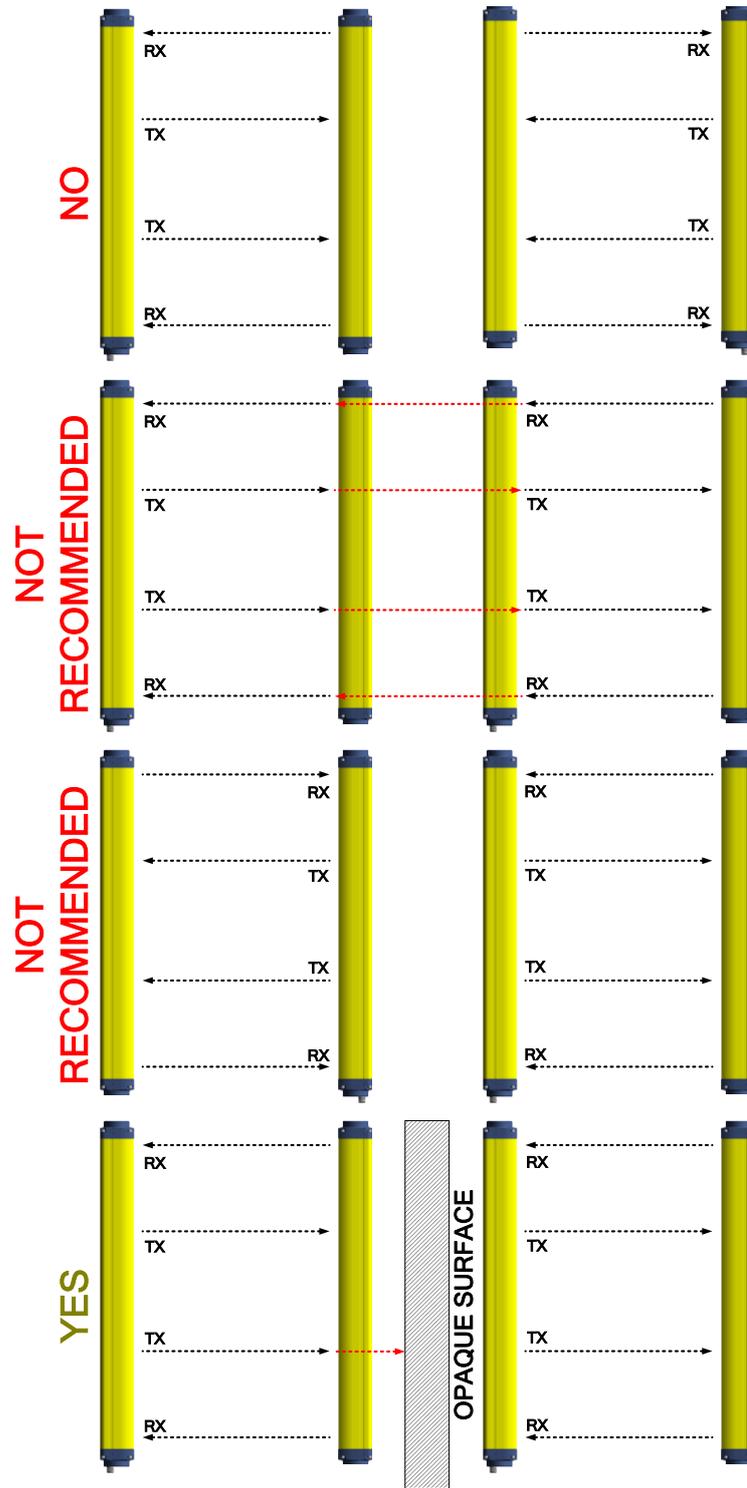


Figure 18

3.2.4 Active and passive orientation

The two units shall be assembled parallel each other, and looking at the references on the aluminium profile. The configurations shown in must be avoided.



Figure 19

3.2.5 Precautions to respect during the use of deviating mirrors

The operator must observe the following precautions when using the deviating mirrors:

- ☞ The alignment of the active unit can become a very critical operation when deviating mirrors are used. Even a very small angular displacement of the mirror is enough to loose alignment. The SG-LP laser pointer accessory can be used to avoid this problem.

- The presence of dust or dirt on the reflecting surface of the mirror causes a drastic reduction in the range.

3.2.6 Controls after first installation

- The control operations to carry-out after the first installation and before machine start-up are listed hereinafter. The controls must be carried-out by qualified personnel, either directly or under the strict supervision of the person in charge of machinery Safety.

Verify that:

- ESPE remains in SAFE state (➡) intercepting the beams along the protected area using the specific test piece (TP-40, TP-50, TP-90), following the Figure 20 scheme.

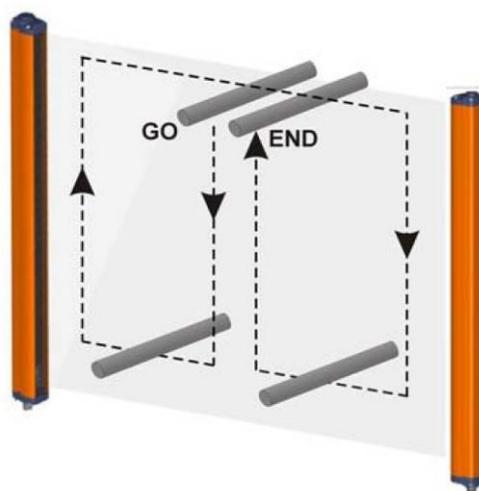


Figure 20

- ESPE has to be correctly aligned, press slightly on the product side in both directions the red LED must not turn on .
- The activation of the TEST function causes the opening of the OSSD outputs (red LED  on and controlled machine stop).
- The response time at machine STOP, including the ESPE and machine response times, must be included in the limits defined in the calculation of the safety distance (refer to section 3 – “INSTALLATION MODE”).
- The safety distance between the dangerous parts and ESPE must comply with the requirements indicated in section 3 – “INSTALLATION MODE”.
- A person must not access or remain between ESPE and the dangerous parts of the machine.
- Access to the dangerous areas of the machine must not be possible from any unprotected area.
- ESPE must not be disturbed by external light sources, ensuring that it remains in NORMAL OPERATION condition for at least 10-15 minutes and, placing the specific test piece in the protected area, in the SAFE state for the same period.
- Verify the correspondence of all the accessory functions, activating them in the different operating conditions.

4 MECHANICAL MOUNTING

The active and passive units must be installed with the relevant sensitive surfaces facing each other and the distance must be included within the operating range of the model used (see section 13).

The two units must be positioned the most aligned and parallel possible.

The next step is the fine alignment, as shown in section 7 – “ALIGNMENT PROCEDURE”.

 SG BODY series light curtains are provided without mounting brackets. It is possible to order separately the accessory kits of brackets described in the following paragraphs depending on the fastening mode required by the particular application. Please refer to section 14 – “ACCESSORIES”.

4.1 SIDE FIXING BRACKETS

As all the Datalogic SG series safety light curtains, the most common way to fix the product is by taking advantage from the two grooves along the sides of the aluminium case, the 90° bracket system is made by ST-5090 + IM-5018 and screws (see Figure 21).

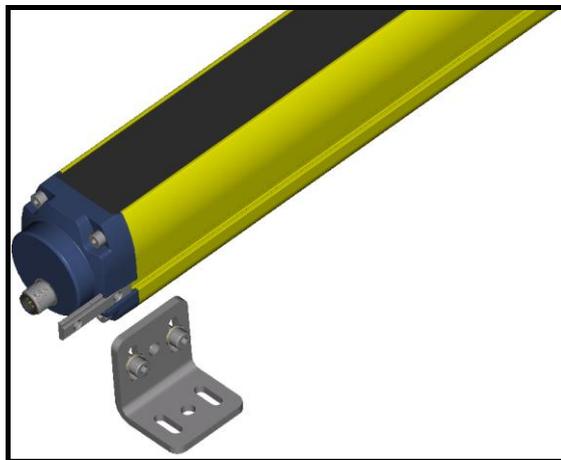


Figure 21

The ST-5090 is a 4 mm thickness sheet metal. The IM-5018 is a double nut M5 tapped obtained by machine tooling (for further details and recommended mounting positions see also paragraph 14.1).

4.2 ROTATING BRACKETS

The rotate fixing has been improved and revised due to the size of the caps. Is possible indeed to ensure a 360° rotation around the dedicated cylindrical surfaces designed on the caps themselves. To obtain this is necessary to use the ST-5089, 4 mm thickness sheet metal with a special, dedicated shape. The screw to fix this bracket is the same one used to fix the closing caps, with an M4 nut (see Figure 22). For further information refer to paragraph 14.2.

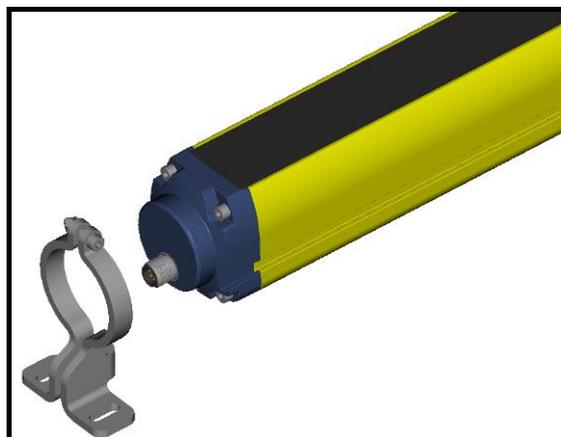


Figure 22

4.3 BOTTOM FIXING BRACKETS

With the SG BODY series has been implemented a new kind of bracket fixing, by using the third groove, on the bottom side of the housing, that allows to use whether the 90° bracket ST-5090 or the new ST-5093 and, in both the cases, the same IM-5018 and screws seen before.

This kind of fixing is also very versatile in order to assembly the product into the new Protective Stands mechanical armour.

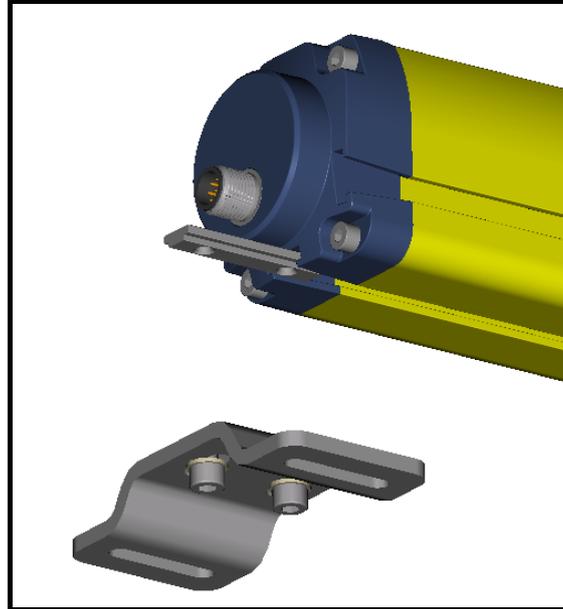


Figure 23

The ST-5093 is a 4 mm thickness sheet metal as well. For further details and recommended mounting positions see also paragraph 14.3.

4.4 VIBRATION DAMPERS

In case of applications with particularly strong vibrations, vibration dampers together with mounting brackets are recommended to reduce the impact of the vibrations (see Figure 24).

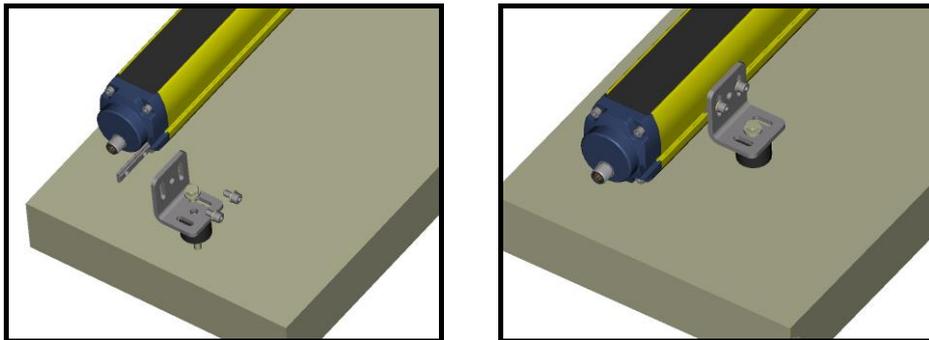


Figure 24

5 ELECTRICAL CONNECTIONS AND CONFIGURATION – STOP

All electrical connections to the emitting and receiving units are made through male M12 connectors, located on the lower part of the two units.

For active unit a M12 8-poles connector is used.

5.1 IMPORTANT NOTES FOR INSTALLATION

For the correct functioning of the SG BODY series safety light curtains, the following precautions regarding the electrical connections have to be respected:

Do not place connection cables in contact with or near high-voltage cables and/or cable undergoing high current variations (e.g. motor power supplies, inverters, etc.);


Do not connect in the same multi-pole cable the OSSD wires of different light curtains;

The device is already equipped with internal overvoltage and overcurrent suppression devices. The use of other external components is not recommended.

5.2 MINIMAL CONNECTION

Wires configuration: EDM disabled, automatic restart


Power supply: 0V, 24V (0-24 Vdc)

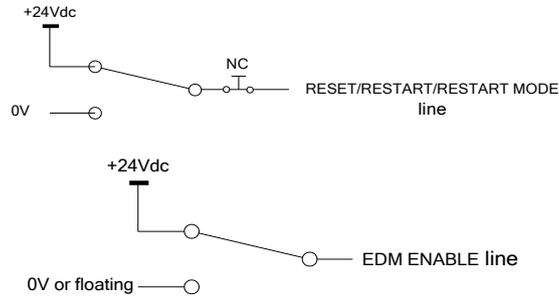

OTHER lines: floating

5.3 COMPLETE CONNECTION LIST

RX

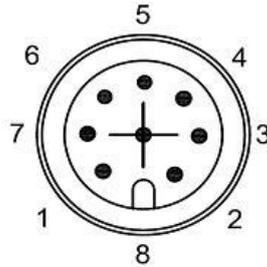

M12 8 poles:

- 1 = white = RESET/RESTART/RESTART MODE
- 2 = brown = 24V
- 3 = green = EDM ENABLE
- 4 = yellow = EDM
- 5 = grey = OSSD1
- 6 = pink = OSSD2
- 7 = blue = 0V
- 8 = red = EARTH

5.4 RESTART MODE AND RESET/RESTART BUTTON CONNECTION

The Restart mode and Reset/Restart wire must be connected through a N.C. button to the 0V or 24V from the power supply of the ESPE to select, respectively, manual restart or automatic restart.

The Reset/Restart wire can be used to enter alignment function, when N.C. button is pressed at start-up.



The RESET/RESTART button must be located in such a way that the operator can check the protected area during any reset operation.

5.5 EXTERNAL RELAYS CONNECTION

Example: connection to the safety relay.

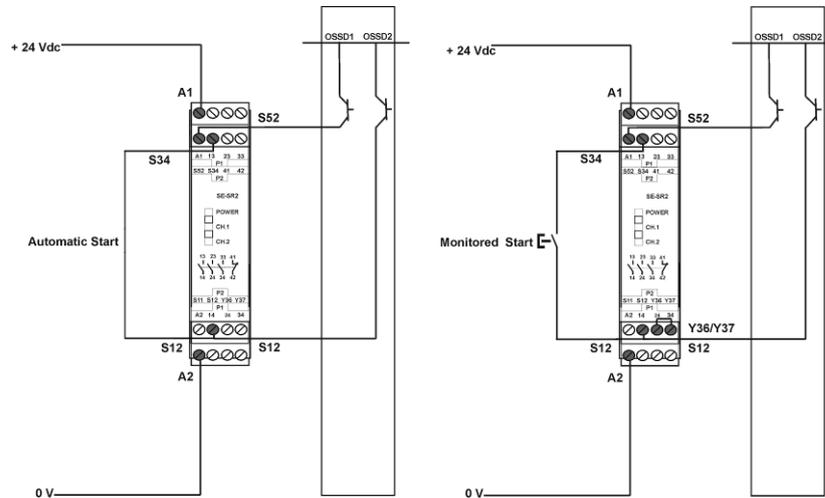


Figure 25

The previous figure shows the connection between the safety light curtains and the safety relay of the SE-SR2 series functioning in the Automatic Restart mode (left side) and Manual Restart with monitoring (right side).

Do not use varistors, RC circuits or LEDs in parallel at relay inputs or in series at OSSD outputs.

The OSSD1 and OSSD2 safety contacts cannot be connected in series or in parallel, but must be used separately (Figure 26), conforming to the plant's safety requirements.

If one of these configurations is erroneously used, the device enters into the output failure condition (see section 8 – “DIAGNOSTIC”).

Connect both OSSDs to the activating device. Failure to connect an OSSD to the activating device jeopardises the system safety degree that the light curtain has to control.

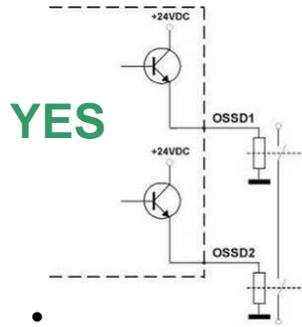


Figure 26

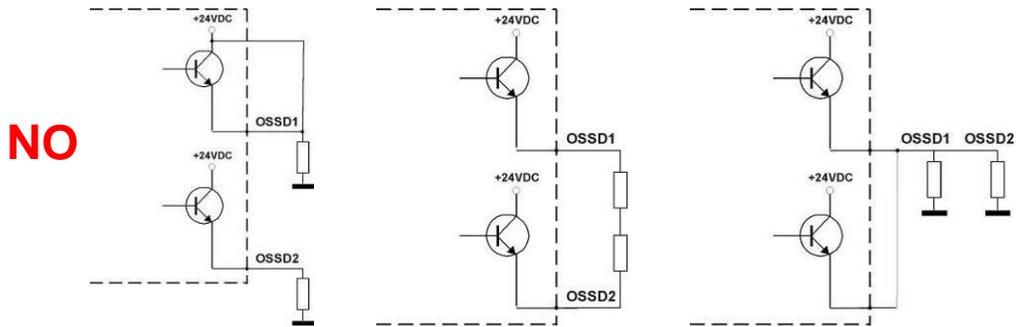


Figure 27

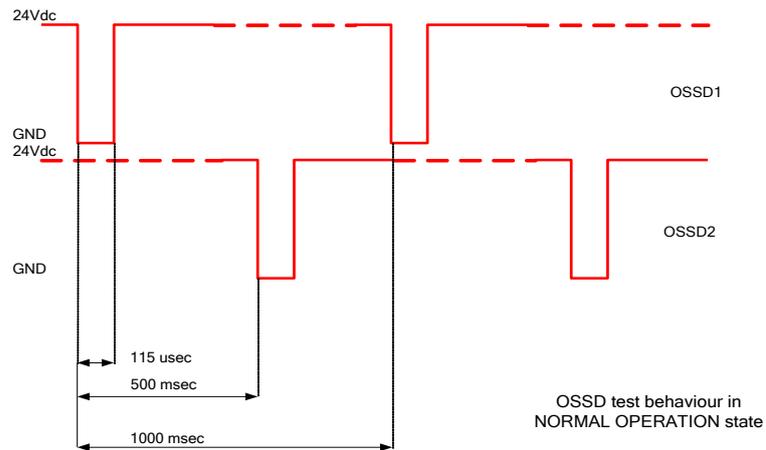


Figure 28

5.6 EDM ENABLE INPUT CONNECTION

The EDM ENABLE wire must be connected to 0V or 24V from the power supply of the ESPE, respectively, to enable or to disable EDM function. Floating line level is the same as 0V.

5.7 EDM CONTROL CONNECTION

The EDM wire has to be connected to a 24 Vdc normally closed contact, before powering. The monitoring function, if selected, is not activated if at powering the wire is not correctly connected; in this case the light curtain enters in a failure condition.

5.8 EARTH CONNECTION

The SG BODY safety light curtain has to be connected as a protective class III equipment (SELV/PELV power supply), like in the table.

Electrical protection	layout connection	note
class III	SELV/PELV	---

A functional earth is available on a line of the M12 connector on TX and RX equipment. User can optionally connect or leave floating the functional earth in order to achieve in own application a best compliance with electromagnetic Interferences.

6 FUNCTIONING MODE

6.1 STANDARD CONFIGURATION


LINE	LAYOUT CONNECTION	BEHAVIOUR
RESET/RESTART/ RESTART MODE		AUTOMATIC RESTART
RESET/RESTART/ RESTART MODE		MANUAL RESTART
EDM		(EDM ENABLE: active)
EDM ENABLE		EDM enabled
OSSDs		

6.2 RESET FUNCTION

The RX light curtain has a RESET function that is activated consequently to an internal failure. The operator has to press the NC RESET button that resetting the break condition and thus the ESPE can return to a normal functioning behaviour .

The button has to be kept pressed for at least 5 seconds in one of the following conditions:

- Output failure;
- Optic failure;
- EDM test function failure;

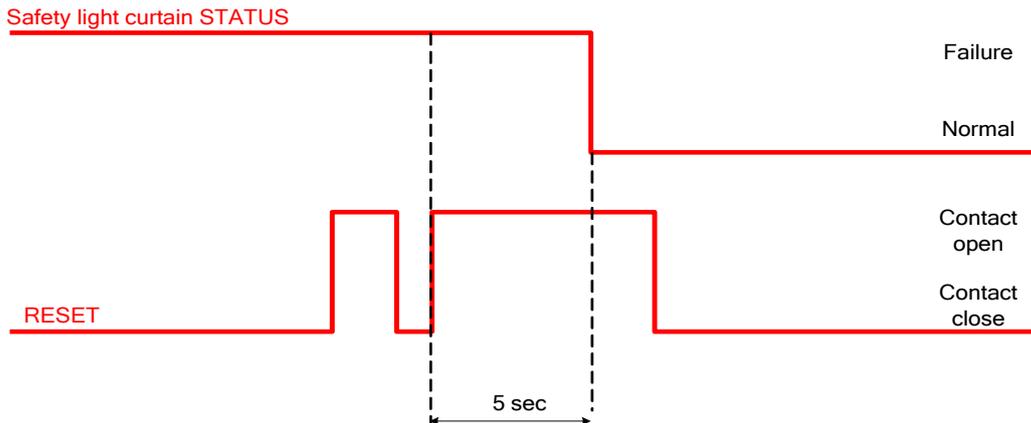

If the error is not removed, the light curtain goes in the failure configuration (for all failures) yet.

Notes: the micro controller failure is a non-restorable failure. In this case is necessary a “turn OFF-turn ON action” to return to a normal behavior. This is also valid for the following failures:

- Restart selection failure
- Override connection failure
- Override sequence failure
- Dip switch failure

6.3 RESTART MODE SELECTION FUNCTION

The interruption of a beam due to an opaque object causes the opening of OSSD outputs and the stop of the safety light curtain, SAFE condition ➡ I.

ESPE standard operation can be reset to NORMAL OPERATION condition (OSSD safety contact closing condition, ➡) in two different ways:

Automatic Restart: after activation, ESPE resets to NORMAL OPERATION condition once the object has been removed from the controlled area.

Manual Restart: after activation, ESPE resets to NORMAL OPERATION condition only once the Restart function has been enabled and provided that the object has been removed from the controlled area (see Figure 29). This condition, called interlock, is signalled on the display (see paragraph 8.2 – “Diagnostic messages”).



WARNING: Carefully assess risk conditions and restart modes. In applications protecting access to dangerous areas, the automatic restart mode is potentially unsafe if it allows the operator to pass completely beyond the sensitive area. In this case, the manual restart or, for example, the manual restart of the SE-SR2 relay (paragraph 5.5 – “External relays connection”) is necessary.

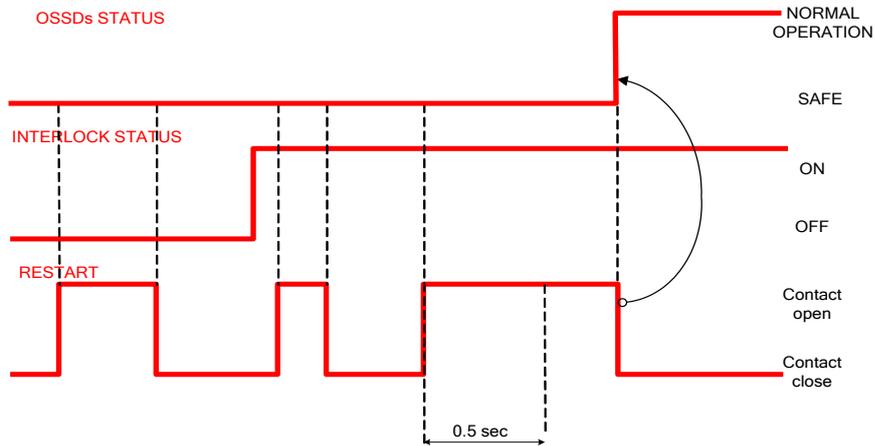


Figure 29 – Time chart for manual restart

Select either automatic or manual restart by connecting pin of RX connector . (see section 5 – “ELECTRICAL CONNECTIONS AND CONFIGURATION”)

6.4 EDM FUNCTION

The light curtain has a function for monitoring actuation external devices (EDM). This function can be enabled or deactivated by pin of RX connector (. (see section 5 – “ELECTRICAL CONNECTIONS AND CONFIGURATION”)

EDM deactivated:

Disconnect or connect to 0V EDM input pin of RX connector.

EDM enabled:

Connect EDM input pin of RX connector . (see section 5 – “ELECTRICAL CONNECTIONS AND CONFIGURATION”) to a 24 VDC normally closed contacts of the device to be monitored (see Figure 30).

NOTE: The decimal dot on the display shows that the function is enabled.

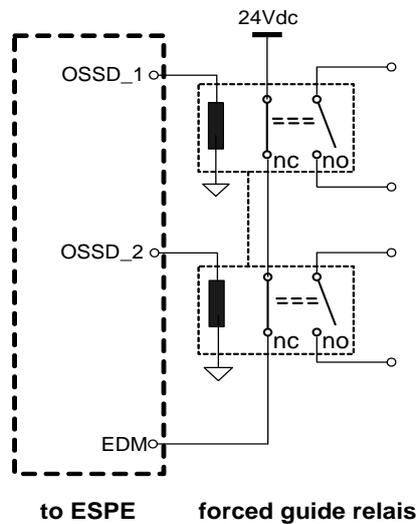


Figure 30

The function controls the NC contact switching according to the changes of the OSSD status. The timing diagram below explains the relationship between the cause (OSSDs) and the effect (EDM), with the maximum permissible delay.

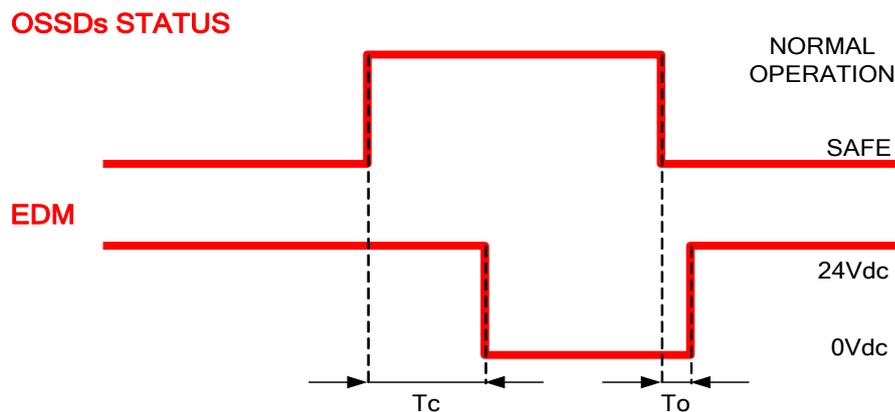


Figure 31

- T_c ≥ 350 msec time after the OSSD OFF-ON passage when EDM is carried-out;
- T_o ≥ 100 msec time after the OSSD ON-OFF passage when EDM is carried-out.

(two different times for the mechanical contact driven by a spring).

6.5 ALIGNMENT FUNCTION

SG BODY series light curtains are fitted with a system which informs the user about reached alignment degree. The ALIGNMENT function also can be activated by simply pressing the external normally closed push-button link to RESET/RESTART/RESTART MODE line (see section 5 – “ELECTRICAL CONNECTIONS AND CONFIGURATION”) for at least 0.5 sec at start-up, as shown in the timing diagram of Figure 32.

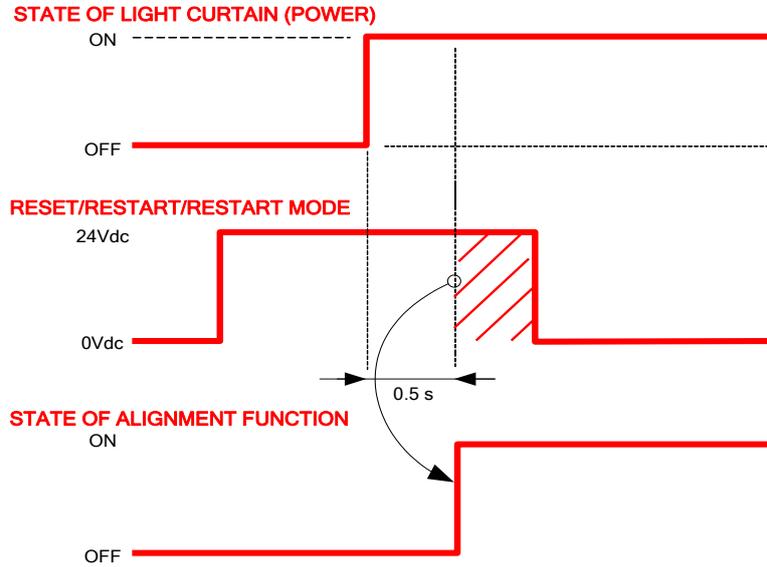


Figure 32

When a good state of alignment is reached a power OFF and a power ON operation carry back the ESPE in normal operation (OSSDs in ON state). In the alignment mode the OSSDs are OFF.

7 ALIGNMENT PROCEDURE

The good alignment between the active and the passive unit of the ESPE is necessary to obtain the correct behaviour of the light curtain. A good alignment avoid a not steady light curtain status (OSSDs flicker on→off and vice versa) due to dust or vibration.

The alignment is perfect if the optic axes of the active unit's beams coincide with the optic axes of the corresponding mirrors on the passive unit.

It is important to define the means of symbol drawn on optic side of light curtain.

The direction of arrows associated to the two yellow led are correlated to the first and the last emitter/receiver couple, referring the position of M12 connector. Signals are clearly identified through symbols allowing their immediate reading, independent of bars directions; a short description of LEDs signals proves nevertheless necessary so as to avoid misunderstandings.

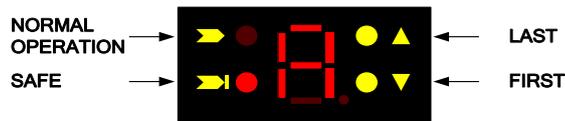


Figure 33

Figure 34 shows that the first couple emitter/receiver is the nearest to M12 connector; the last couple emitter/receiver is the farthest to M12 connector.

The standard installation described hereinafter is the one shown in Figure 34 for a SG4-RB4 model, i.e. with the bar assembled with the connectors pointing down. In SG4-RB2 models, obviously, the first and the last couple coincide.

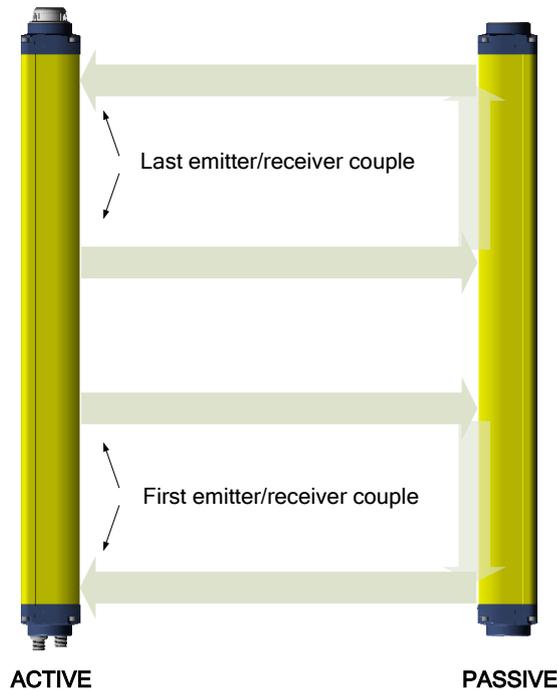


Figure 34

An one digit display can inform the user about the level of alignment of the array of beams. As operating distance increase, the SG-LP laser pointer tool attached on active or passive unit can be used to help the user to obtain the best alignment (see Figure 35).

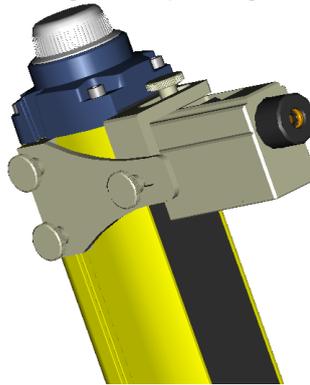


Figure 35

7.1 LIGHT CURTAIN ALIGNMENT PROCEDURE

The light curtain alignment can be effected only after having completed the mechanical installation and the electrical connections as described above. Compare alignment results with those given in the following table.

To enter alignment mode see paragraph 6.5 – “Alignment function”.



ATTENTION: in alignment mode the OSSDs of the light curtain are in OFF state


VISUALIZATION	ALIGNMENT STATE	ALIGNMENT QUALITY	OSSD STATE OUT OF ALIGNMENT-FUNCTION
	first and last couple are not aligned	bad	OFF
	last couple isn't aligned	bad	OFF
	first couple isn't aligned	bad	OFF
	every couple over the lower threshold and no couple over the upper threshold	good	ON
	every couple over the lower threshold and one couple over the upper threshold		ON
	every couple over the upper threshold		excellent

1. Keep the active unit in a steady position and set the passive unit until the yellow LED (▼ FIRST) is OFF. This condition shows the alignment of the first emitter/receiver couple.
2. Rotate the passive unit, pivoting on the lower optics axis, until the yellow LED (▲ LAST) is OFF.

NOTE: Ensure that the green LED (➡ NORMAL OPERATION) is steady ON.

3. Delimit the area in which the green LED (➡) is steady through some micro adjustments - for the first and then for the second unit - so to have the maximum alignment (3) and then place both units in the centre of this area.
4. Fix the two units firmly using brackets. Verify that the green LED (➡) on the active unit is ON and beams are not interrupted, then verify that the red LED SAFE (➡I) turns ON if even one single beam is interrupted (condition where an object has been detected). This verification shall be made with the special cylindrical “Test Piece” having a size suitable to the resolution of the device used (refer paragraph 3.2.6 – “Controls after first installation”).
5. Switch OFF and ON the device in normal operating mode.

The alignment level is monitored also during device normal operating mode, and is visualized by a bar graph shown on the user interface. Once the curtain has been aligned and correctly fastened, the display signal is useful to check the alignment and to view any change in the environmental conditions (presence of dust, light disturbance and so on). The behavior is resumed in the next table.

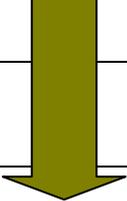VISUALIZATION	ALIGNMENT STATE	ALIGNMENT QUALITY
	every couple over the lower threshold and no couple over the upper threshold	min
	every couple over the lower threshold and one couple over the upper threshold	
	every couple over the upper threshold	

8 DIAGNOSTICS

8.1 USER INTERFACE

A user interface aids the customer to control and check the state of the light curtain, for alignment mode, normal operation and for troubleshooting activity. User interface is composed by four LEDs and an one-digit display on the active unit.




Figure 36

8.2 DIAGNOSTIC MESSAGES

8.2.1 Active unit side

The table completely explains all the visualization informations except those relative to the alignment function (see par. 7.1 – “Light curtain alignment procedure”).

VISUALIZATION	STATUS	DESCRIPTION	ACTION
	INTERLOCK	FREE BEAMS, OSSDS OFF	USER CAN TAKE DEVICE IN NORMAL OPERATION ACTIVATING RESTART LINE.
	INTERLOCK	INTERRUPTED BEAMS, OSSDS OFF	USER MUST FREE BEAMS PATH BEFORE ACTIVATING RESTART LINE.
	NORMAL OPERATION	OSSDS ON	
	SAFE	OSSDS OFF	
	NORMAL OPERATION, SAFE, INTERLOCK	EDM FUNCTION ACTIVE	
	NORMAL OPERATION, SAFE, INTERLOCK	EDM FUNCTION NOT ACTIVE	
	FAILURE LOCKOUT (RECOVERABLE)	FAILURE ON ONE OR BOTH OSSDS, OSSDS OFF	USER MUST ACTIVATE RESET LINE. IF ESPE DOES NOT RESET USER MUST CONTACT DATALOGIC TECHNICAL SUPPORT.

VISUALIZATION	STATUS	DESCRIPTION	ACTION
 	FAILURE LOCKOUT (NOT RECOVERABLE)	MICROCONTROLLER FAILURE, OSSDS OFF	USER MUST TURN OFF/ON ESPE. IF THE PROBLEM PERSISTS USER MUST CONTACT DATALOGIC TECHNICAL SUPPORT.
 	FAILURE LOCKOUT (RECOVERABLE)	OPTICAL FAILURE, OSSDS OFF	USER MUST ACTIVATE RESET LINE. IF ESPE DOES NOT RESET USER MUST CONTACT DATALOGIC TECHNICAL SUPPORT.
 	FAILURE LOCKOUT (RECOVERABLE)	EDM FAILURE, OSSDS OFF	USER MUST CHECK EDM ENABLE LINE OR DIP-SWITCHES, EDM LINE, EXTERNAL SWITCHING DEVICE AND ACTIVATE RESET LINE. IF ESPE DOES NOT RESET USER MUST CONTACT DATALOGIC TECHNICAL SUPPORT.
	ESPE OFF	POWER SUPPLY FAILURE, OSSDS OFF	USER MUST CHECK POWER SUPPLY CONNECTION. IF THE PROBLEM PERSISTS USER MUST CONTACT DATALOGIC TECHNICAL SUPPORT.

9 PERIODICAL MAINTENANCE AND WARRANTY

The following is a list of recommended check and maintenance operations that should be periodically carried-out by qualified personnel (see also paragraph 3.2.6 – “Controls after first installation”)

Check that:

The ESPE stays in SAFE state (➤I) during beam interruption along the entire protected area, using the specific Test Piece (TP-40, TP-50, TP-90), according to the Figure 20 scheme.

The ESPE is correctly aligned. Press slightly product side, in both directions and the red LED (➤I) must not turn ON.

Enabling the TEST function, the OSSD outputs should open (the red LED ➤I is ON and the controlled machine stops).

The response time upon machine STOP (including response time of the ESPE and of the machine) is within the limits defined for the calculation of the safety distance (see section 3 – “INSTALLATION MODE”).

The safety distance between the dangerous areas and the ESPE are in accordance with the instructions included in section 3 – “INSTALLATION MODE”.

Access of a person between ESPE and machine dangerous parts is not possible nor is it possible for him/her to stay there.

Access to the dangerous area of the machine from any unprotected area is not possible.

The ESPE and the external electrical connections are not damaged.

The frequency of checks depends on the particular application and on the operating conditions of the safety light curtain.

9.1 GENERAL INFORMATION AND USEFUL DATA

Safety MUST be a part of our conscience.

The safety devices fulfil their safety function only if they are correctly installed, in accordance with the Standards in force. If you are not certain to have the expertise necessary to install the device in the correct way, Datalogic Technical Support is at your disposal to carry out the installation.

The device uses fuses that are not self-resetting. Consequently, in presence of short-circuits causing the cut-off of these fuses, both units shall be sent to Datalogic Technical Support department.

A power failure caused by interferences may cause the temporary opening of the outputs, but the safe functioning of the light curtain will not be compromised.

9.2 WARRANTY

Datalogic guarantees each brand new SG BODY system, under standard use conditions, against manufacturing defects in material and workmanship for a period of 36 (thirty-six) months from the date of manufacturing.

Datalogic will not be liable for any damages to persons and things caused by wrong installation modes or device use.

Warranty validity is subject to the following conditions:

User shall notify Datalogic the failure within thirty-six months from product manufacturing date.

Failure or malfunction shall not have been originated directly or indirectly by:

use for unsuitable purposes;

failure to comply with the intended use prescriptions;

negligence, unskillfulness, wrong maintenance;

repairing, changes, adaptations not made by Datalogic personnel, tampering with the device, etc.;

accidents or crashes (even due to transportation or by force majeure causes);

other causes not depending from Datalogic

If the device does not work, send both units (receiver and emitter) to Datalogic.

The Customer is responsible for all transport charges and damage risks or material loss during transport, unless otherwise agreed.

All replaced products and parts become a property of Datalogic.

Datalogic does not accept any warranty or right other than the above-described ones. No requests for compensation for expenses, activities stop or other factors or circumstances somehow connected to the failure of the product or one of its parts to operate cannot be put forward for any reason.

In case of problems, please contact DATALOGIC Service Department.

Technical Support

Tel.: +39 051 6765611

Fax.: +39 051 6759324

www.datalogic.com

10 DEVICE MAINTENANCE

SG Body safety light curtains do not require special maintenance operations.

To avoid the reduction of the operating distance, optic protective front surfaces must be cleaned at regular intervals.

Use soft cotton cloths dampened in water.

Do not apply too much pressure on the surface in order to avoid making it opaque.

Please do not use on plastic surfaces or on light curtain painted surfaces:

alcohol or solvents

wool or synthetic cloths

paper or other abrasive materials

10.1 PRODUCT DISPOSAL

Under current Italian and European laws, Datalogic is not obliged to take care of product disposal at the end of its life.

Datalogic recommends to dispose of the product in compliance with local laws or contact authorised waste collection centres.

11 TECHNICAL DATA

Electrical Data	
Power supply	24 Vdc \pm 20%
Active unit consumption (RX)	6.5 W max (without load)
Outputs:	2 PNP outputs short-circuit protection (1.4 A @55°C)
Output current:	0.5 A max / each output
Output voltage - ON min:	Power supply value less 1 V
Output voltage - OFF max:	0.2 V
Output capacitive load	2.2 uF @24Vdc
Response time:	From 11 to 24 ms See section 13 – "LIST OF AVAILABLE MODELS"
Protected height:	from 500 mm to 1200 mm See section 13 – "LIST OF AVAILABLE MODELS"
Safety category:	Type 4 (ref. EN 61496-1) SIL 3 (ref. EN 61508) SIL CL 3 (ref. EN 62061) PL e Cat. 4 (ref. IEC 13849-1 2008) See section 13 – "LIST OF AVAILABLE MODELS"
Auxiliary functions:	Reset, Restart selection, Alignment, EDM
Electrical protection:	class III
Connections:	M12 8 poles
Cable length (for power supply):	70 m. max
Pollution degree	2
Optical Data	
Light source:	Infrared LED (950 nm wavelength)
Resolution:	40 mm 319,75 mm 419,75 mm 519,75 mm
Beam spacing	20 mm 300 mm 400 mm 500 mm
Operating distance:	From 0,5 to 8 mt See section 13 – "LIST OF AVAILABLE MODELS"
Ambient light rejection:	IEC 61496-2
Mechanical and environmental data	
Operating temperature:	0...55°C
Storage temperature:	-25...+ 70 °C
Temperature class:	T6
Humidity:	15...95 % (no condensation)
Water protection grade:	IP 65 (EN 60529)
Vibrations:	0.35 mm width, 10...55 Hz frequency, 20 sweep for each axis, 1 octave/min (EN 60068-2-6)
Shock resistance:	16 ms (10g) 1.000 shock for each axis (EN 60068-2-29)
Housing material:	Painted aluminium (yellow RAL 1003)
Caps material:	PBT Valox 508 (pantone 072-CVC)
Front glass material:	PMMA
Connections:	M12 connector
Weight:	SG4-RB2-050-OO-E: 1,3 Kg SG4-RB3-080-OO-E: 1,8 Kg SG4-RB4-090-OO-E: 2,1 Kg SG4-RB4-120-OO-E: 2,6 Kg SG4-RDB2 (passive): 1,2 Kg SG4-RDB3 (passive): 1,7 Kg SG4-RDB4-090 (passive): 1,9 Kg SG4-RDB4-120 (passive): 2,5 Kg (single bar---not packaged)

12 OVERALL DIMENSIONS

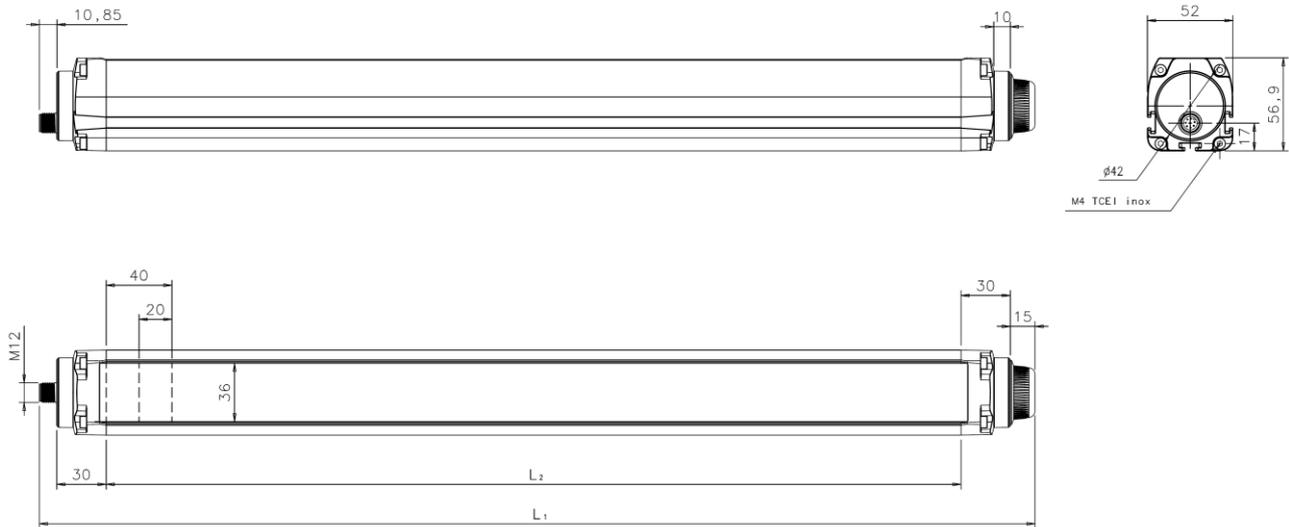


Figure 37

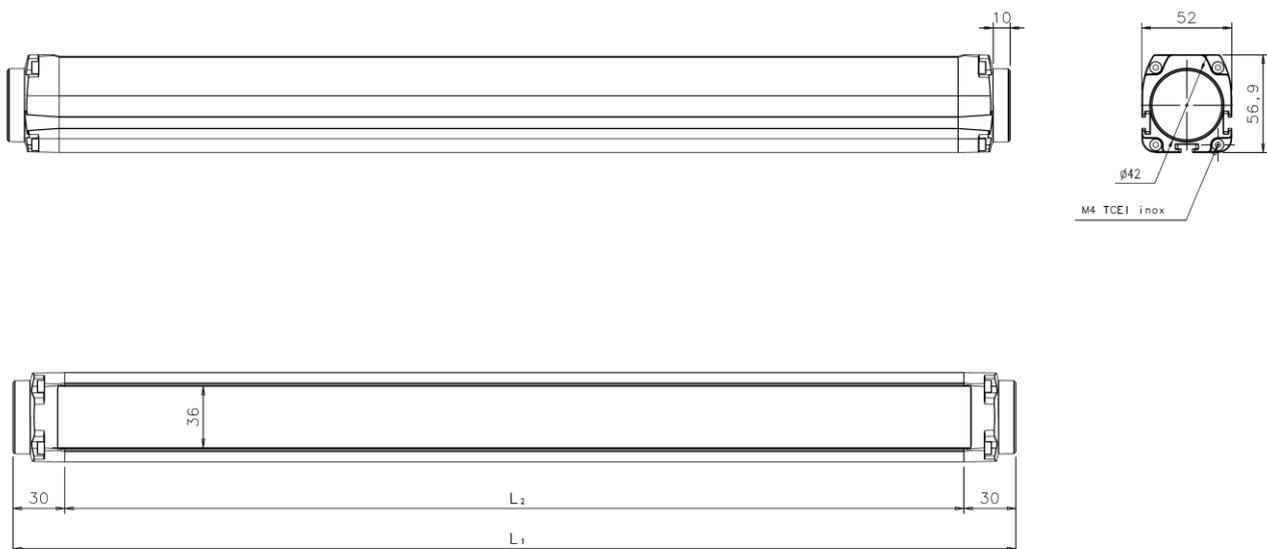


Figure 38

Model	L1 [mm]	L2 [mm]
SG4-RB2-050-OO-E (Figure 37)	606,35	520,5
SG4-RB3-080-OO-E (Figure 37)	906,35	820,5
SG4-RB4-090-OO-E (Figure 37)	1006,35	920,5
SG4-RB4-120-OO-E (Figure 37)	1306,35	1220,5
SG4-RDB2 (Figure 38)	580,5	520,5
SG4-RDB3 (Figure 38)	880,5	820,5
SG4-RDB4-090 (Figure 38)	980,5	920,5
SG4-RDB4-120 (Figure 38)	1280,5	1220,5

13 LIST OF AVAILABLE MODELS

Description	Protected height (mm)	Beams (Nr.)	Resolution (mm)	Response time (msec)	Interaxis (mm)	Operating Distance (m)	Code
SG4-RB2-050-OO-E	500	2	519,75	11	500	0.5..8	957951000
SG4-RB3-080-OO-E	800	3	399,75	12	380	0.5..8	957951010
SG4-RB4-090-OO-E	900	4	319,75	12	300	0.5..6.5	957951190
SG4-RB4-120-OO-E	1200	4	419,75	12	400	0.5..8	957951020
SG4-RDB2 (passive)	500	-	-	-	500	-	957951100
SG4-RDB3(passive)	800	-	-	-	380	-	957951110
SG4-RDB4-090 (passive)	900	-	-	-	300	-	957951170
SG4-RDB4-120 (passive)	1200	-	-	-	400	-	957951120

Description	Safety Standards				Prob. of danger failure/hour	Life span	Mean Time to Dangerous Failure	Average Diagnostic Coverage	Safe Failure Fraction	Hardware Fault Tolerance
	EN ISO 13849-1	EN 954-1	EN IEC 61508	EN IEC 62061						
Description	PL	CAT	SIL	SIL CL	PFHd (1/h)	T1 (years)	MTTFd (years)	DC	SFF	HFT
SG4-RB2-050-OO-E	e	4	3	3	9,28E-09	20	463	96,00%	97,20%	1
SG4-RB3-080-OO-E	e	4	3	3	9,28E-09	20	463	96,00%	97,20%	1
SG4-RB4-090-OO-E	e	4	3	3	9,28E-09	20	463	96,00%	97,20%	1
SG4-RB4-120-OO-E	e	4	3	3	9,28E-09	20	463	96,00%	97,20%	1

14 ACCESSORIES

(dimensions in mm)

14.1 METAL ANGLED FIXING BRACKET (ST-K4STD-SG BODY BIG)

MODEL	DESCRIPTION	CODE
ST-K4STD-SG BODY BIG	Angled fixing bracket (4 pcs kit)	95ASE1950


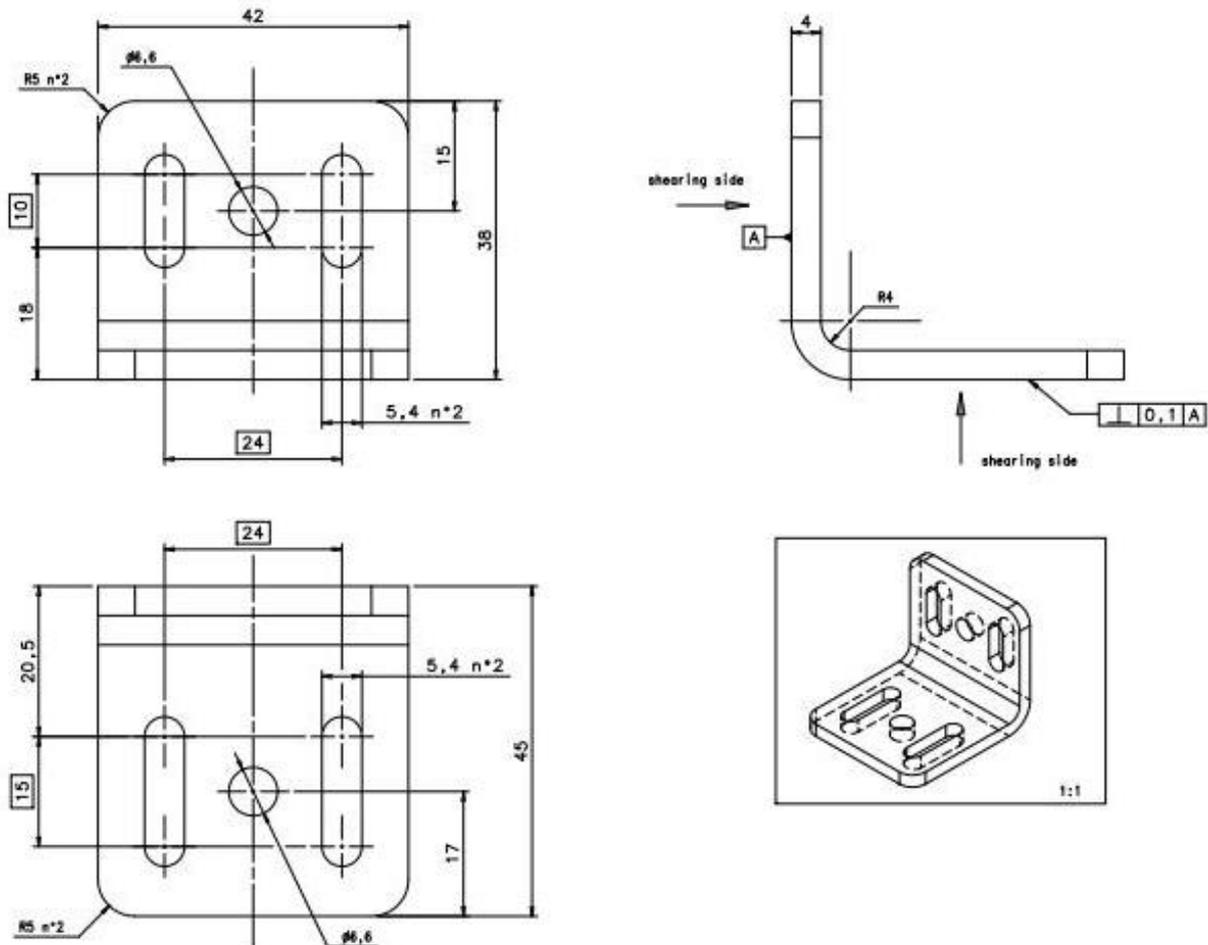



Figure 39

Modalità di montaggio staffe laterali

MODEL	DESCRIPTION	CODE
ST-K4AV	Antivibration support (4 pcs kit)	95ACC1700
ST-K6AV	Antivibration support (6 pcs kit)	95ACC1710

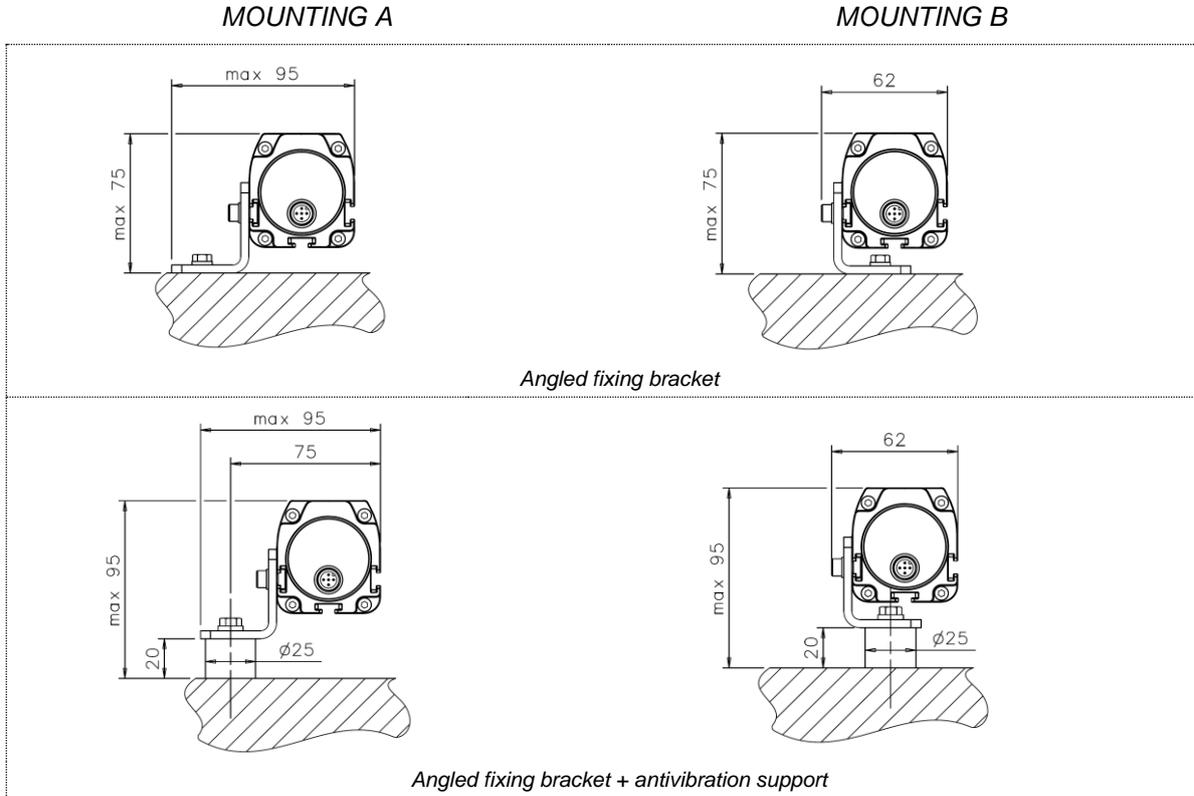



The recommended mounting positions according to the light curtain length are shown and in the subsequent table.

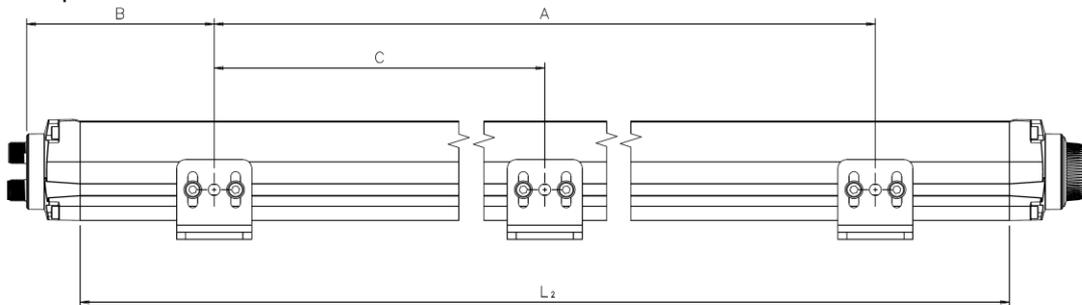

MODEL	L ₂ [mm]	A [mm]	B [mm]	C [mm]	CODE
SG4-RB2-050-OO-E	520,5	320,5	100	-	957951000
SG4-RB3-080-OO-E	820,5	370,5	125	-	957951010
SG4-RB4-090-OO-E	920,5	620,5	150	-	957951190
SG4-RB4-120-OO-E	1220,5	1020,5	100	510,25	957951020
SG4-RDB2 (passive)	520,5	320,5	100	-	957951100
SG4-RDB3 (passive)	820,5	370,5	125	-	957951110
SG4-RDB4-090 (passive)	920,5	620,5	150	-	957951170
SG4-RDB4-120 (passive)	1220,5	1020,5	100	510,25	957951120


14.2 ROTATIVE FIXING BRACKET (ST-K4ROT-SG BODY BIG)

MODEL	DESCRIPTION	CODE
ST-K4ROT-SG BODY BIG	Metal rotative fixing bracket (4 pcs kit)	95ASE1960

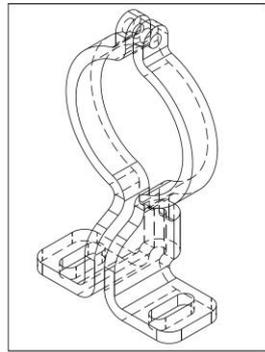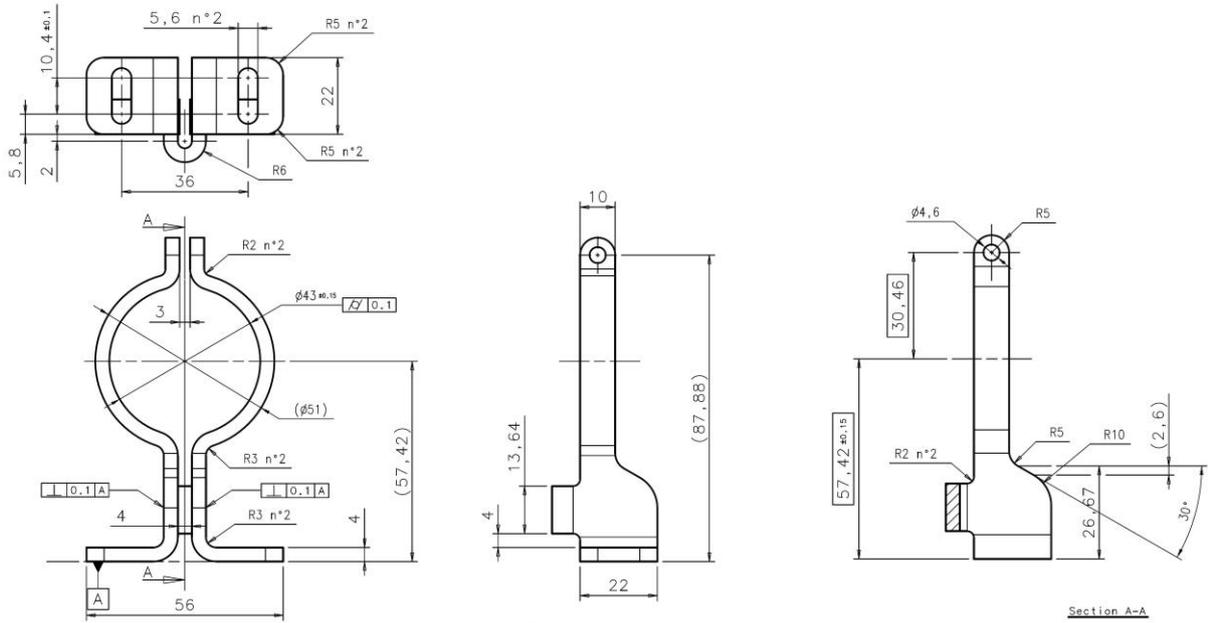





3,2

Rotative fixing bracket mounting

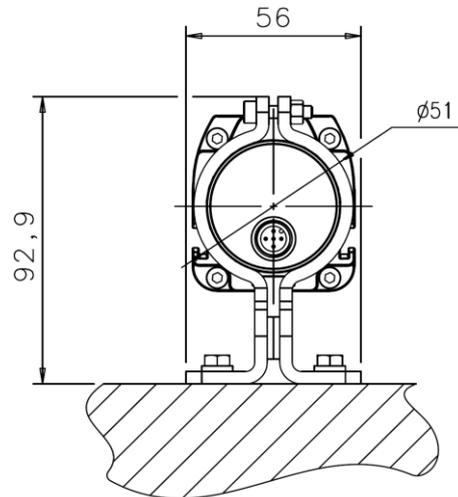


14.3 REAR FIXING BRACKET (ST-K4REAR-SG BODY BIG)

MODEL	DESCRIPTION	CODE
ST-K4REAR-SG BODY BIG	Metal rear fixing bracket (4 pcs kit)	95ASE1970

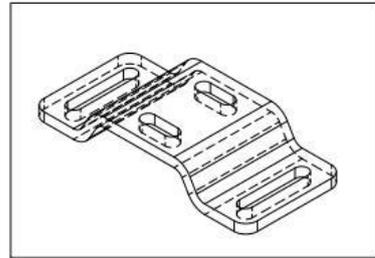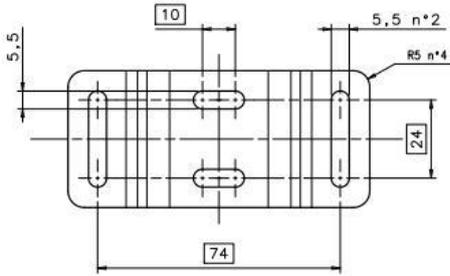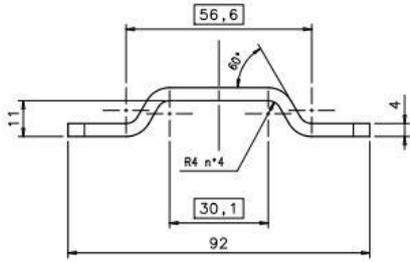

3,2/


Rear fixing bracket mounting

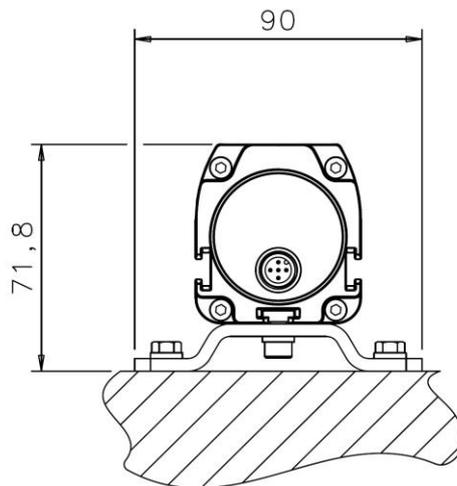


14.4 PROTECTIVE STANDS (SG-PSM)

MODEL	DESCRIPTION	CODE
SG-PSM-2-500	Protective stand with 2 mirrors H=500mm	95ASE2300
SG-PSM-3-800	Protective stand with 3 mirrors H=800mm	95ASE2310
SG-PSM-4-900	Protective stand with 4 mirrors H=900mm	95ASE2320
SG-PSM-4-1200	Protective stand with 4 mirrors H=1200mm	95ASE2330


SG-PSM-2-500

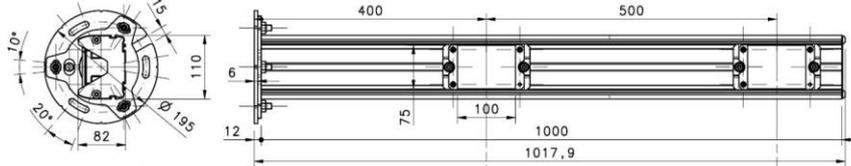


SG-PSM-3-800

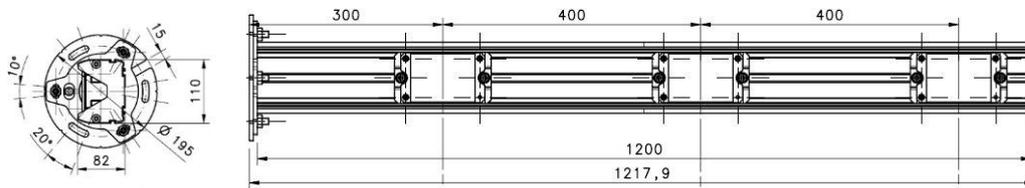

SG-PSM-4-900

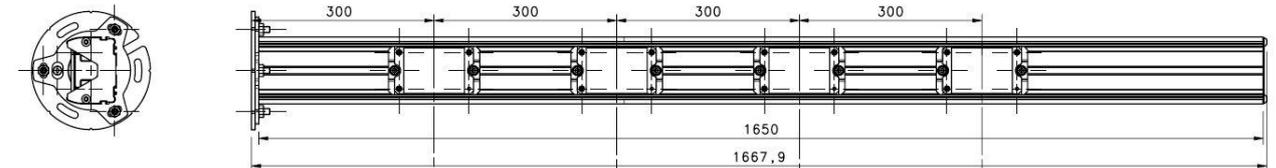

SG-PSM-4-1200

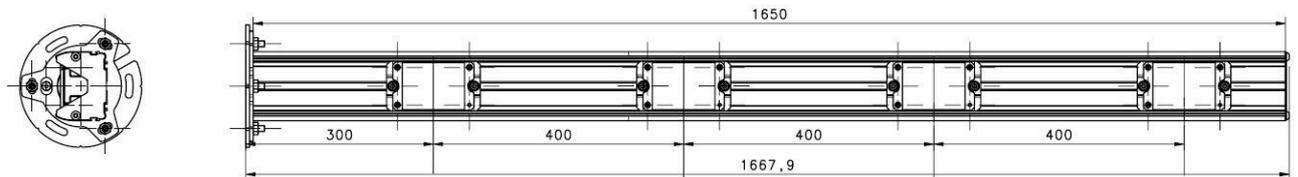


14.5 PROTECTIVE STANDS (SG-PSB)

MODEL	DESCRIPTION	L (mm)	CODE
SG-PSB 600	Protective stand H=600mm	600	95ASE2240
SG-PSB 1000	Protective stand H=1000mm	1000	95ASE2250
SG-PSB 1200	Protective stand H=1200mm	1200	95ASE2260
SG-PSB 1650	Protective stand H=1650mm	1650	95ASE2270
SG-PSB 1900	Protective stand H=1900mm	1900	95ASE2280




Fixing kit

MODEL	DESCRIPTION	CODE
ST-PS4-SG-SE	Mounting kit (4 pcs kit)	95ASE1750
ST-PS6-SG-SE	Mounting kit (6 pcs kit)	95ASE1760

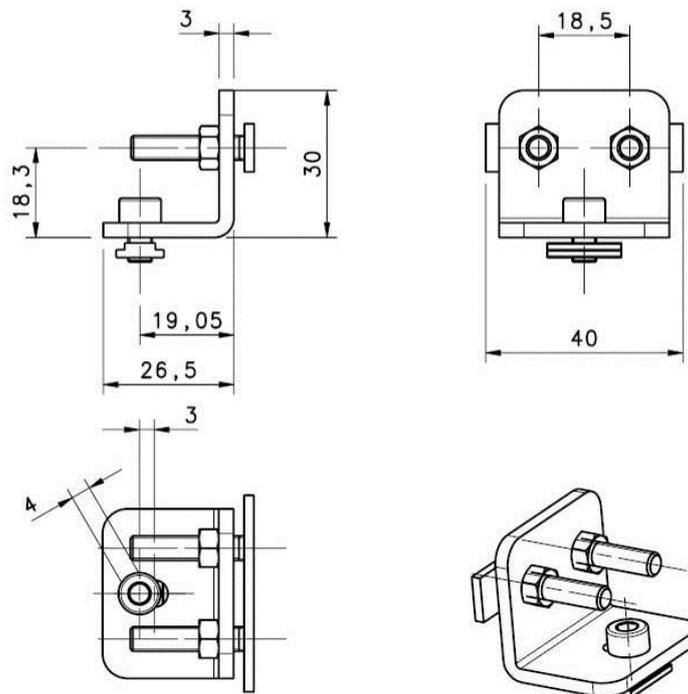


14.6 PLATE KIT FOR PROTECTIVE STANDS (SG-P)

MODEL	DESCRIPTION	CODE
SG-P	Plate kit for SG-PSB/SG-PSM	95ASE2290

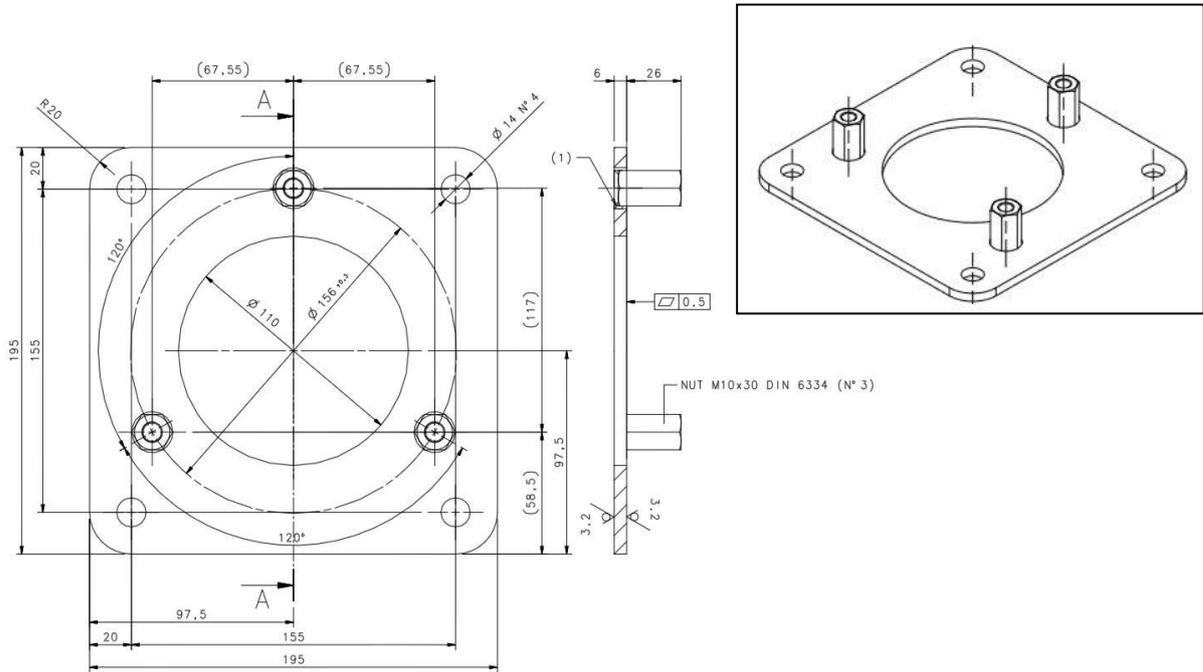


Mounting with SG-PSB/SG-PSM

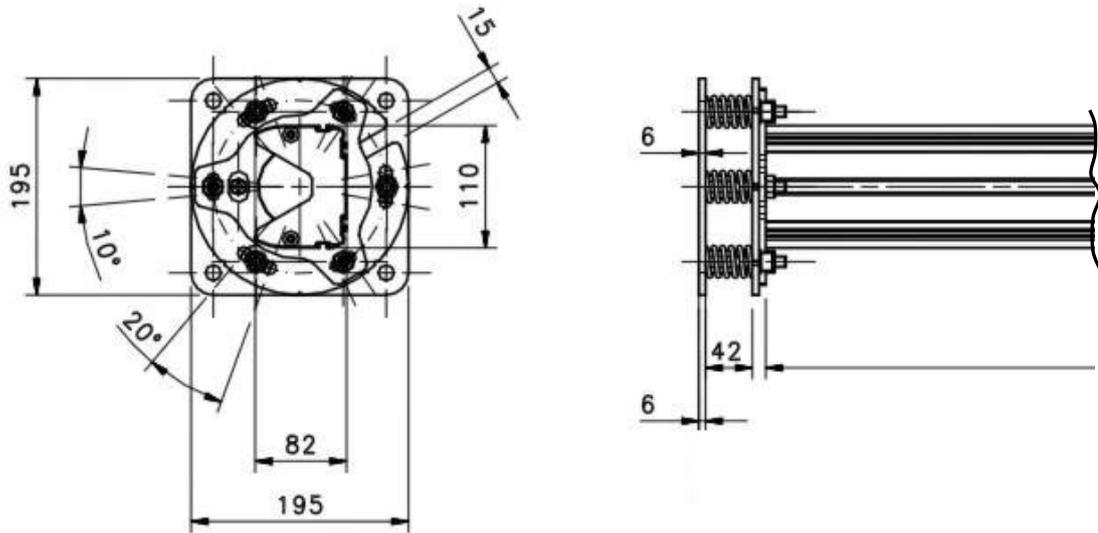

14.7 COLUMNS AND FLOOR STANDS (SE-S)

MODEL	DESCRIPTION	L (mm)	X (mm)	CODE
SE-S 800	Column and floor stand H= 800 mm	800	30x30	95ACC1730
SE-S 1000	Column and floor stand H= 1000 mm	1000	30x30	95ACC1740
SE-S 1200	Column and floor stand H= 1200 mm	1200	30x30	95ACC1750
SE-S 1500	Column and floor stand H= 1500 mm	1500	45x45	95ACC1760
SE-S 1800	Column and floor stand H= 1800 mm	1800	45x45	95ACC1770

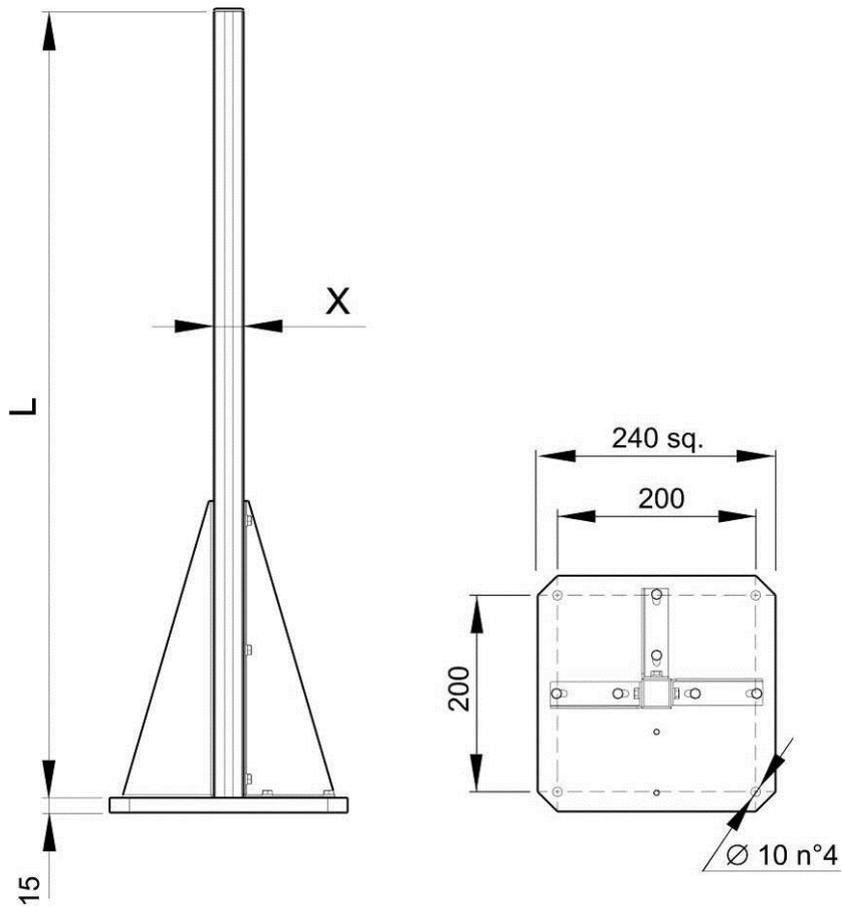


14.8 LASER POINTER (SG-LP)

MODEL	DESCRIPTION	CODE
SG-LP	Laser pointer	95ASE5590

The laser pointer of the **SG-LP** series represents a valid alignment and installation support for the safety light curtain series.

The pointer can be moved along the light curtain profile to verify the complete device alignment (top and bottom).

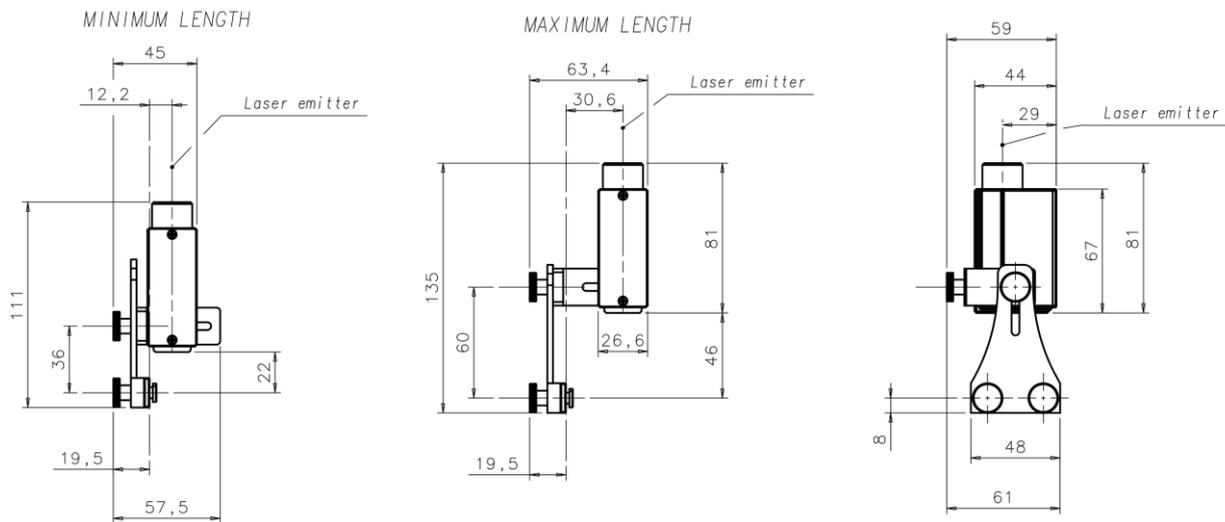

14.9 TEST PIECE (TP)

MODEL	DESCRIPTION	CODE
TP-14	Test piece Ø 14mm L = 300mm	95ACC1630
TP-20	Test piece Ø 20mm L=300mm	95ACC1640
TP-24	Test piece Ø 24mm L=300mm	95ASE2570
TP-30	Test piece Ø 30mm L=300mm	95ACC1650
TP-34	Test piece Ø 34mm L=300mm	95ASE2580
TP-35	Test piece Ø 35mm L=300mm	95ACC1660
TP-40	Test piece Ø 40mm L=300mm	95ACC1820
TP-50	Test piece Ø 50mm L=300mm	95ACC1790
TP-90	Test piece Ø 90mm L=300mm	95ACC1800


14.10 CONNECTION CABLES

MODEL	DESCRIPTION	CODE
CS-A1-03-U-03	5-pole M12 cable (axial) 3 m	95ASE1170
CS-A1-03-U-05	5-pole M12 cable (axial) 5 m	95ASE1180
CS-A1-03-U-10	5-pole M12 cable (axial) 10 m	95ASE1190
CS-A1-03-U-15	5-pole M12 cable (axial) 15 m	95ASE1200
CS-A1-03-U-25	5-pole M12 cable (axial) 25 m	95ASE1210
CS-A1-03-U-50	5-pole M12 cable (axial) 50m	95A252700
CS-A1-06-U-03	8-pole M12 cable (axial) 3 m	95ASE1220
CS-A1-06-U-05	8-pole M12 cable (axial) 5 m	95ASE1230
CS-A1-06-U-10	8-pole M12 cable (axial) 10 m	95ASE1240
CS-A1-06-U-15	8-pole M12 cable (axial) 15 m	95ASE1250
CS-A1-06-U-25	8-pole M12 cable (axial) 25 m	95ASE1260
CS-A1-06-U-50	8-pole M12 cable (axial) 50 m	95A252710
CS-A1-10-U-03	12-pole M12 cable (axial) 3 m	95A252720
CS-A1-10-U-05	12-pole M12 cable (axial) 5 m	95A252730
CS-A1-10-U-10	12-pole M12 cable (axial) 10 m	95A252740
CS-A1-10-U-15	12-pole M12 cable (axial) 15 m	95A252750
CS-A1-10-U-25	12-pole M12 cable (axial) 25 m	95A252760
CS-A1-10-U-50	12-pole M12 cable (axial) 50 m	95A252770

14.11 SAFETY RELAY


MODEL	DESCRIPTION	CODE
SE-SR2	Type 4 safety relay - 3 NQ 1 NC	95ACC6170

The drawing show the connection between the safety light curtain and the type 4 safety relay of the SE-SR2 series operating in the automatic Restart mode.

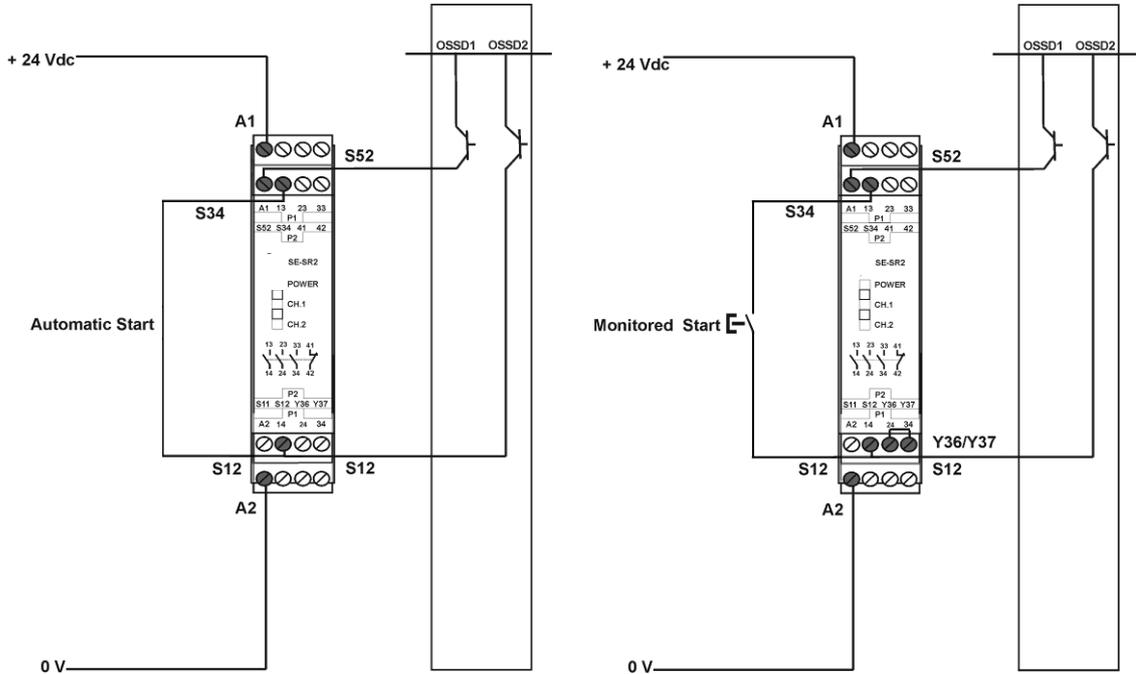

EDM Relay Box

MODEL	DESCRIPTION	CODE
CSME-03VU24-Y14	EDM Relay	95ASE1270

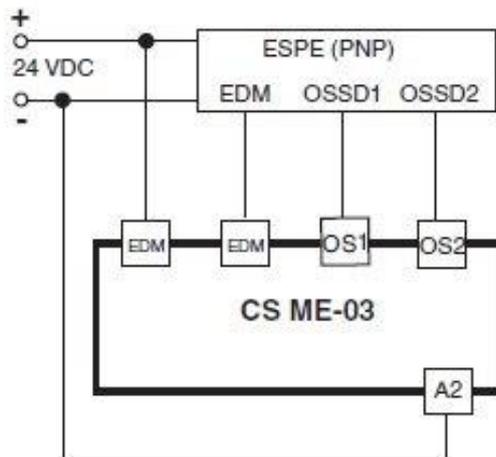

15 GLOSSARY

ACTIVE OPTOELECTRONIC PROTECTIVE DEVICE (AOPD): its detection function is achieved thanks to the use of optoelectronic receivers and emitters detecting the optical beams interruptions inside the device caused by an opaque object present inside the specified detecting area.

An active optoelectronic protective device (AOPD) can operate both in emitter-receiver mode and in retro-reflective light curtains.

BLOCK CONDITION (=BREAK): status of the light curtain taking place when a suitably-sized opaque object (see DETECTING CAPACITY) interrupts one or several light curtain beams.

Under these conditions, OSSD1 and OSS2 light curtain outputs are simultaneously switched OFF within the device response time.

BREAK: see "Block condition" in the glossary.

CONTROLLED MACHINE: machine having the potentially-dangerous points protected by the light curtain or by another safety system.

CROSSING HAZARD: situation under which an operator crossing the area controlled by the safety device and this latter stops and keeps the machine stopped until the hazard is eliminated, and then enters the dangerous area. Now the safety device could not be able to prevent or avoid an unexpected restart of the machine with the operator still present inside the dangerous area.

DANGEROUS AREA: area representing an immediate or imminent physical hazard for the operator working inside it or who could get in contact with it.

DETECTING CAPACITY: sensor function parameter limit as specified by the manufacturer, which activates the electrosensitive protection equipment (ESPE). In case of an active optoelectronic protective device (AOPD), with resolution we mean the minimum dimension, which an opaque object must have in order to interrupt at least one of the beams that constitute the sensitive area.

EDM: see "External device monitoring" in the glossary.

ELECTROSENSITIVE PROTECTIVE EQUIPMENT (ESPE): assembly of devices and/or components working together to activate the protective disabling function or to detect the presence of something and including at least: a sensor, command/control devices and output signal switching devices.

EMITTER: unit emitting infrared beams, consisting of a set of optically-synchronised LEDs. The emitting unit, combined with the receiving unit (installed in the opposite position), generates an optical "curtain", *i.e.* the detecting area.

EXTERNAL DEVICE MONITORING (EDM): device used by the ESPE to monitor the status of the external command devices.

FINAL SWITCHING DEVICE (FSD): part of the control system involving machine safety conditions. It breaks the circuit to the machine primary control element (MPCE) when the output signal switching device (OSSD) becomes inactive.

FORCE-GUIDED CONTACTS: Contacts can be guided forcibly when they are connected mechanically so that they can switch simultaneously, when the input stage is active.

If one contact of the series remains "hanged", no other relay contact is able to move.

This function allows the control of the EDM status.

MACHINE OPERATOR: qualified person allowed to use the machine.

MACHINE PRIMARY CONTROL ELEMENT (MPCE): electrically-powered element having the direct control of machine regular operation so as to be the last element, in order of time, to operate when the machine has to be enabled or blocked.

MIN. INSTALLATION DISTANCE: min. distance necessary to allow machine dangerous moving parts to completely stop before the operator can reach the nearest dangerous point. This distance shall be measured from the middle point of the detecting area to the nearest dangerous point. Factors affecting min. installation distance value are machine stop time, total safety system response time and light curtain resolution.

N.O.: normally opened

N.C.: normally closed

OFF STATUS: status when the output circuit is interrupted and does not allow current stream.

ON STATUS: status when the output circuit is operational and allows current stream.

OUTPUT SIGNAL SWITCHING DEVICE (OSSD): part of the ESPE connected to machine control system. When the sensor is enabled during standard operating conditions, it switches to disabled status.

PROTECTED AREA: area where a specified test object is detected by the ESPE.

PROTECTIVE DEVICE: device having the function to protect the operator against possible risks of injury due to the contact with machine potentially-dangerous parts.

QUALIFIED OPERATOR: a person who holds a professional training certificate or having a wide knowledge and experience and who is acknowledged as qualified to install and/or use the product and to carry out periodical test procedures.

RECEIVER: unit receiving infrared beams, consisting of a set of optically-synchronised phototransistors. The receiving unit, combined with the emitting unit (installed in the opposite position), generates an optical "curtain", i.e. the detecting area.

RESOLUTION: see "Detecting capacity" in the glossary.

RESPONSE TIME: max. time elapsing between the occurrence of the event leading to sensor activation and the reaching of the inactive state by the output signal switching device (OSSD).

RESTART: see "Restart Interlocking Device" in the glossary.

RESTART INTERLOCKING DEVICE: device preventing machine automatic restart after sensor activation during a dangerous phase of machine operating cycle, after a change of machine operating mode, and after a variation in machine start control devices.

RISK: probability of occurrence of an injury and severity of the injury itself.

SAFETY LIGHT CURTAIN: it is an active optoelectronic protective device (AOPD) including an integrated system consisting of one or several emitting elements and one or several receiving elements forming a detection area with a detecting capacity specified by the supplier.

START INTERLOCKING DEVICE (= START): device preventing machine automatic start if the ESPE is live or the voltage is disabled and enabled once again.

TEST PIECE: opaque object having a suitable size and used to test safety light curtain correct operation.

TYPE (OF ESPE): the Electrosensitive Protective Equipment (ESPE) have different reactions in case of faults or under different environmental conditions. The classification and definition of the "type" (ex. type 2, type 4, according to IEC 61496-1) defines the minimum requirements needed for ESPE design, manufacturing and testing.

WORKING POINT: machine position where the material or semifinished product is worked.



 **DATALOGIC**

www.datalogic.com